

 attractive

 reliable

 smart

sauber

Lavasecadora Serie 7-8614 LS / Serie 7-10715 LS Manual de usuario

Washing & dryer machine Serie 7-8614 LS / Serie 7-10715 LS User manual.

 useful

 efficient

 connected

 **sauber**

CONTENIDO

INSTRUCCIONES DE SEGURIDAD

■ Instrucciones de seguridad.....	2
-----------------------------------	---

INSTALACIÓN

■ Descripción del producto.....	7
■ Instalación.....	8

OPERACIONES

■ Inicio rápido	11
■ Antes de cada lavado	12
■ Dispensador de detergente	13
■ Panel de control.....	14
■ Opciones.....	15
■ Otras funciones	16
■ Programas.....	18
■ Tabla de programas de lavado	19

MANTENIMIENTO

■ Limpieza y mantenimiento.....	20
■ Solución de problemas.....	23
■ Especificaciones técnicas	25
■ Ficha de producto	26

INSTRUCCIONES DE SEGURIDAD

■ Instrucciones de seguridad

Por su seguridad, se debe seguir la información de este manual para minimizar el riesgo de incendio o explosión, descarga eléctrica o para evitar daños a la propiedad, lesiones personales o la muerte. Explicación de los símbolos:

Advertencia!

Esta combinación de símbolo y palabra de advertencia indica una situación potencialmente peligrosa que puede provocar la muerte o lesiones graves a menos que se evite.

Cuidado!

Esta combinación de símbolo y palabra de advertencia indica una situación potencialmente peligrosa que puede resultar en lesiones leves o daños a la propiedad y al medio ambiente.

Nota!

Esta combinación de símbolo y palabra de advertencia indica una situación potencialmente peligrosa que puede provocar lesiones leves o daños.

Advertencia!

¡La descarga eléctrica!

- Si el cable de alimentación está dañado, debe ser reemplazado por el fabricante, su agente de servicio o personas calificadas de manera similar para evitar un peligro.

INSTRUCCIONES DE SEGURIDAD

- Los juegos de mangueras nuevos suministrados con el aparato deben utilizarse y los juegos de mangueras viejos no deben reutilizarse.
- Antes de cualquier mantenimiento del dispositivo, desenchufe el aparato de la red.
- Desenchufe siempre la máquina y cierre el suministro de agua después de su uso. El máximo. presión de entrada de agua, en pascales. Ellos en. presión de entrada de agua, en pascales.
- Para garantizar su seguridad, el enchufe de alimentación debe insertarse en un enchufe de tres polos con conexión a tierra. Verifique con cuidado y asegúrese de que su enchufe esté conectado a tierra de manera adecuada y confiable.
- Asegúrese de que el agua y los dispositivos eléctricos los debe conectar un técnico calificado de acuerdo con las instrucciones del fabricante y las normas de seguridad locales.

¡Riesgo para los niños!

- Países ES: el aparato puede ser utilizado por niños a partir de 8 años y personas con capacidades físicas, sensoriales o mentales reducidas o falta de experiencia y conocimiento si han recibido supervisión o instrucciones sobre el uso del aparato de forma segura y comprender los peligros involucrados. Los niños no deben jugar con el aparato. Los niños no deben realizar la limpieza y el mantenimiento del usuario sin supervisión.
- Los niños menores de 3 años deben ser supervisados para asegurarse de que no jueguen con el aparato.
- Los animales y los niños pueden subirse a la máquina. Compruebe la máquina antes de cada operación.
- Los niños deben ser supervisados para que no jueguen con el aparato.

INSTRUCCIONES DE SEGURIDAD

- La puerta de vidrio puede estar muy caliente durante la operación. Mantenga a los niños y las mascotas alejados de la máquina durante la operación en habitaciones muy húmedas, así como en las habitaciones con gas explosivo o cáustico.
- Retire todos los paquetes y pernos de transporte antes de usar el aparato. De lo contrario, pueden producirse daños graves.
- El enchufe debe ser accesible después de la instalación.

¡Riesgo de explosión!

No lave ni seque artículos que se hayan limpiado, lavado, remojado o tocado con sustancias combustibles o explosivas (como cera, aceite, pintura, gasolina, desengrasantes, disolventes de limpieza en seco, queroseno, etc.). provocar un incendio o una explosión.

- Antes de lavar a mano, enjuague bien las prendas de lavar a mano.

ⓘ Caution!

Instalando el producto!

- Esta lavadora es solo para uso en interiores.
- No está diseñado para integrarse.
- Las aberturas no deben estar obstruidas por una alfombra.
- No se debe instalar lavadora en cuartos de baño o cuartos muy húmedos, así como en cuartos con gases explosivos o cáusticos.
- La lavadora con válvula de entrada única solo se puede conectar al suministro de agua fría. El producto con válvulas de doble entrada debe conectarse correctamente al suministro de agua caliente y agua fría.
- El enchufe debe ser accesible después de la instalación.

INSTRUCCIONES DE SEGURIDAD

- Retire todos los paquetes y pernos de transporte antes de usar el aparato. De lo contrario, pueden producirse daños graves.

¡Riesgo de dañar el aparato!

- Su producto es solo para uso doméstico y solo está diseñado para los textiles adecuados para el lavado a máquina.
- No se suba ni se siente sobre la cubierta superior de la máquina.
- No se apoye contra la puerta de la máquina.
- Precauciones durante el manejo de la máquina:
 1. Una persona especializada debe volver a instalar los pernos de transporte en la máquina.
 2. El agua acumulada se drenará de la máquina.
 3. Manipule la máquina con cuidado. Nunca sujete cada parte sobresaliente de la máquina mientras la levanta. La puerta de la máquina no se puede utilizar como manija durante el transporte.
 4. Este aparato es pesado. Transporte con cuidado.
- No cierre la puerta con demasiada fuerza. Si le resulta difícil cerrar la puerta, verifique si la ropa está bien colocada o distribuida.
- Está prohibido lavar alfombras.

Operación del aparato!

- Antes de lavar la ropa por primera vez, el producto debe operarse en una ronda de todos los procedimientos sin la ropa adentro.
- Se prohíben los disolventes inflamables, explosivos o tóxicos. La gasolina, el alcohol, etc., no deben utilizarse como detergentes. Seleccione únicamente los detergentes adecuados para el lavado a máquina, especialmente para tambor.

INSTRUCCIONES DE SEGURIDAD

- Asegúrese de que todos los bolsillos estén vacíos. Los elementos afilados y rígidos como monedas, broches, clavos, tornillos o piedras, etc. pueden causar daños graves a esta máquina.
- Compruebe si se ha drenado el agua del interior del tambor antes de abrir la puerta. No abra la puerta si hay agua visible.
- Tenga cuidado con las quemaduras cuando el producto drena el agua de lavado caliente.
- Nunca vuelva a llenar el agua a mano durante el lavado.
- Una vez finalizado el programa, espere dos minutos para abrir la puerta.


Embalaje / Aparato antiguo



Esta marca indica que este producto no debe desecharse con otros desechos domésticos en toda la UE. Para evitar posibles daños al medio ambiente o la salud humana debido a la eliminación incontrolada de desechos, recíclelo de manera responsable para promover la reutilización sostenible de los recursos materiales. , utilice los sistemas de recogida o póngase en contacto con el distribuidor donde compró el producto. Ellos regresan y pueden llevar este producto para un reciclaje seguro para el medio ambiente.

INSTALACIÓN


■ Descripción del producto

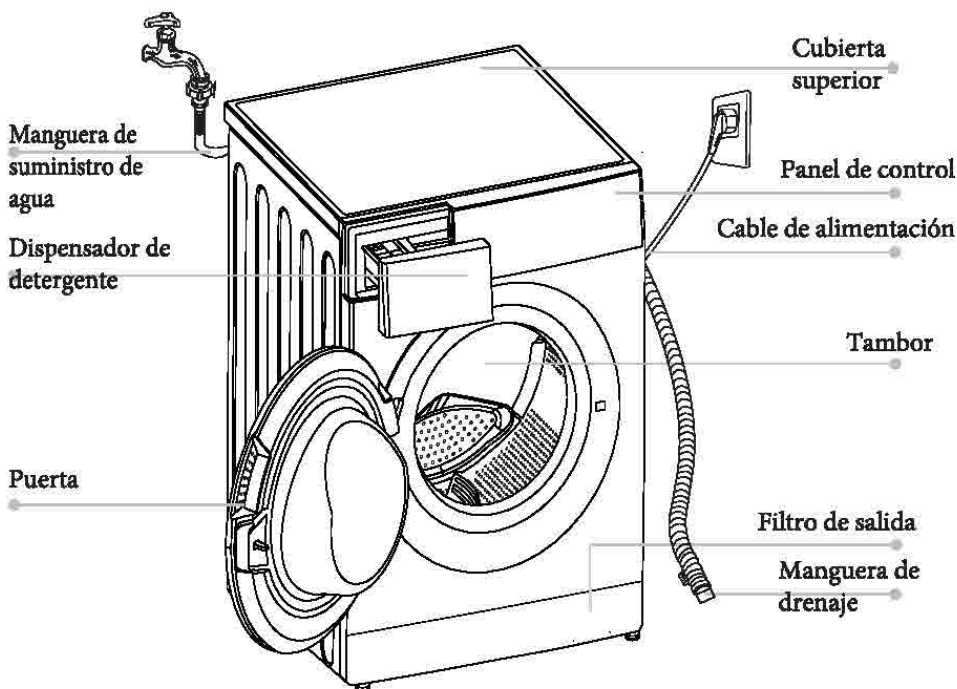

📌 Nota!

- El gráfico de líneas de productos es solo de referencia, consulte el producto real como estándar.

Accesorios

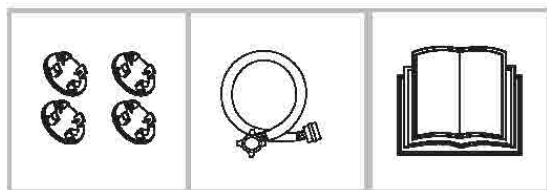

Pernos de los
agujeros de
transporte

Tubo de
Entrada
agua fría

Manual de usuario


INSTALACIÓN

■ Instalación

Area de instalación


⚠ Advertencia!

- La estabilidad es importante para evitar que el producto se mueva.
- Asegúrese de que el producto no se apoye sobre el cable de alimentación.

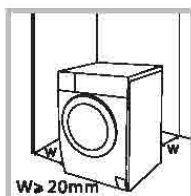

Antes de instalar la máquina, se seleccionará la ubicación caracterizada de la siguiente manera:


1. Superficie rígida, seca y nivelada
2. Evite la luz solar directa
3. Ventilación suficiente
4. La temperatura ambiente es superior a 0 °C
5. Manténgase alejado de fuentes de calor como carbón o gas.

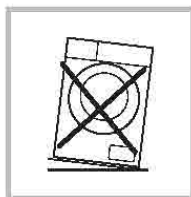

Desembalaje de la lavadora

⚠ Advertencia!

El material de embalaje (por ejemplo, películas, espuma de poliestireno) puede ser peligroso para los niños. ¡Existe riesgo de asfixia! Mantenga todos los envases fuera del alcance de los niños.

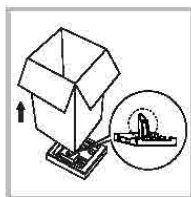

1. Retire la caja de cartón y el embalaje de espuma de poliestireno.
2. Levante la lavadora y retire el embalaje de la base. Asegúrese de quitar la espuma del triángulo pequeño junto con la de abajo. De lo contrario, coloque la unidad con la superficie lateral y luego retire la espuma pequeña de la parte inferior de la unidad manualmente.
3. Retire la cinta que sujeta el cable de alimentación y la manguera de drenaje.
4. Retire la manguera de entrada del tambor.


Retire los pernos de transporte

⚠ Advertencia!

Debe quitar los pernos de transporte de la parte trasera antes de usar el producto. Necesitará los pernos de transporte nuevamente si mueve el producto, así que asegúrese de guardarlos en un lugar seguro.

Siga los siguientes pasos para quitar los tornillos:

1. Afloje 4 tornillos con una llave y luego retírelos.
2. Detenga los orificios con tapones para orificios de transporte.
3. Guarde los pernos de transporte correctamente para uso futuro

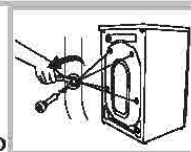


INSTALACIÓN

Nivelación de la lavadora

⚠ Advertencia!

- Las contratueras de las cuatro patas deben atornillarse firmemente contra la carcasa.

- Verifique que las patas estén bien unidas al gabinete. En caso contrario, gírelos a sus posiciones originales y apriete las tuercas.
- Afloje la contratuerca y gire las patas hasta que haga contacto estrecho con el suelo.
- Ajuste las patas y bloquéelas con una llave, asegúrese de que la máquina esté firme.

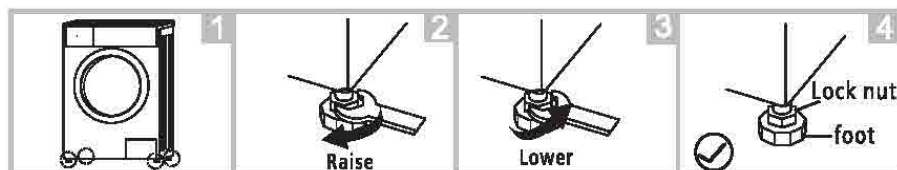


Conecte la manguera de suministro de agua

⚠ Advertencia!

- Para evitar fugas o daños por agua, siga las instrucciones de este capítulo.
- No retuerza, aplaste, modifique ni corte la manguera de entrada de agua.
- Para el modelo con válvula de agua caliente, conéctela a un grifo de agua caliente con manguera de suministro de agua caliente. El consumo de energía disminuirá automáticamente para algunos programas.

Conecte el tubo de entrada como se indica. Hay dos formas de conectar el tubo de entrada.

- Conexión entre grifo ordinario y manguera de entrada.

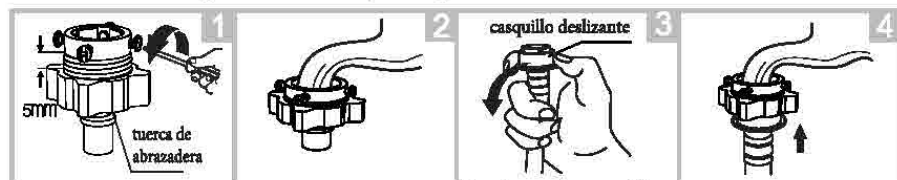


Afloje la tuerca de la abrazadera y los cuatro pernos

Apriete la tuerca de la abrazadera

Presione el casquillo deslizante, inserte la manguera de entrada en la base de conexión

Conexión finalizada

- Conexión entre grifo de rosca y manguera de entrada.

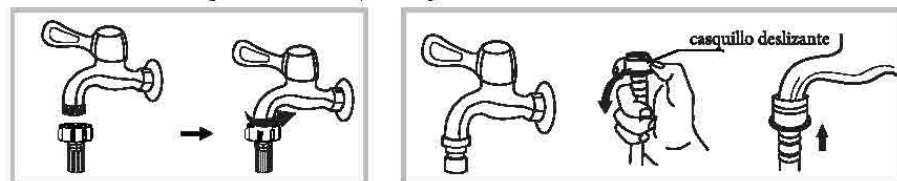


Grifo con rosca y manguera de entrada

Grifo especial para lavadora

INSTALACIÓN

Conecte el otro extremo de la tubería de entrada a la válvula de entrada en la parte posterior del producto y apriete la tubería en sentido horario.

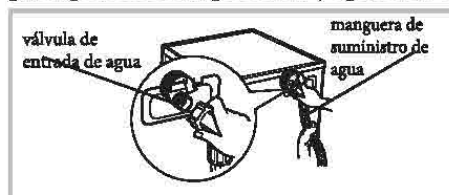

Manguera de drenaje



⚠ Advertencia!

No retuerza ni alargue la manguera de drenaje. Coloque la manguera de desagüe correctamente; de lo contrario, podrían producirse daños por fugas de agua.

Hay dos formas de colocar el extremo de la manguera de drenaje:



1. Ponlo en el lavadero.

2. Conéctela a la tubería de drenaje de rama del canal.

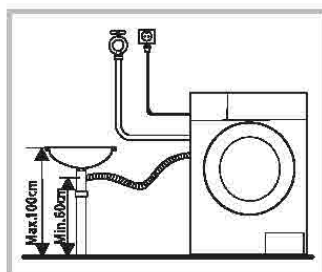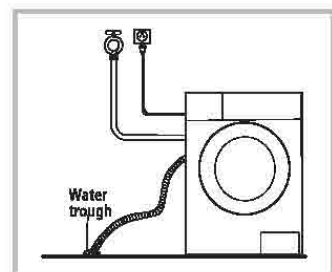

📌 Nota!

- Si la máquina tiene soporte para manguera de drenaje, instálela como se indica a continuación.

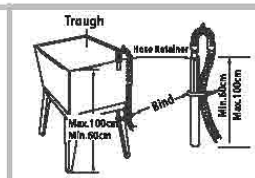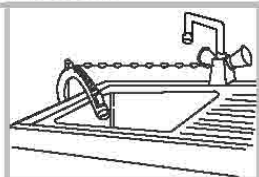

⚠ Advertencia!

- Cuando instale la manguera de drenaje, fíjela correctamente con una cuerda. Si la manguera de desagüe es demasiado larga, no la fuerce dentro de la lavadora, ya que provocaría ruidos anormales.


OPERACIONES

■ Inicio rápido

ⓘ Cuidado!

Antes de lavarlo, asegúrese de que esté instalado correctamente.
Antes de lavar por primera vez, la lavadora se debe operar en una ronda de todos los procedimientos sin ropa de la siguiente manera.


1. Antes de lavar

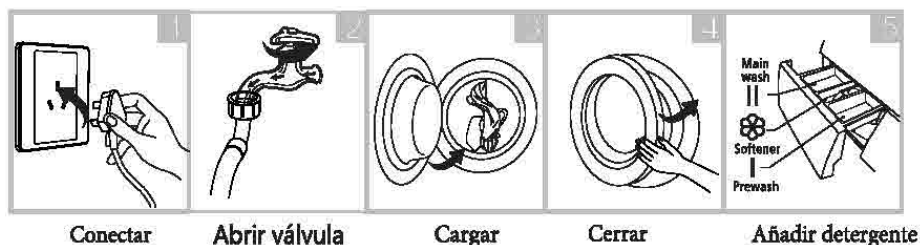

📌 Nota!

- Es necesario agregar detergente en el "caso I" después de seleccionar el prelavado para máquinas con esta función.

2. Lavado

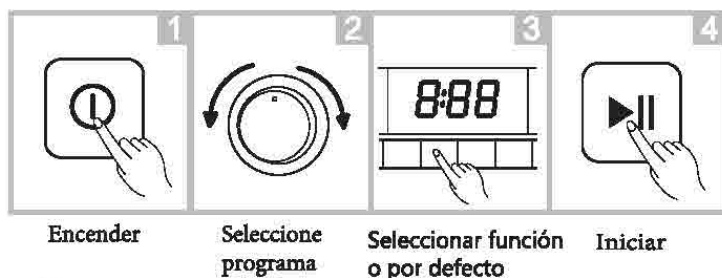

📌 Nota!

- Si se selecciona el valor predeterminado, se puede omitir el paso 2.
- 2.El gráfico de líneas de botones de función es solo de referencia, consulte el producto real como estándar.

3. Después del lavado

La cerradura de la puerta y las luces [Inicio / Pausa] parpadean con el timbre sonando o dos pequeños
los puntos parpadean en la pantalla digital.


OPERACIONES

■ Antes de cada lavado


- La condición de funcionamiento de la lavadora debe ser (0-40) ° C. Si se usa por debajo de 0 ° C, la válvula de entrada y el sistema de drenaje pueden dañarse. Si la máquina se coloca en condiciones de 0 ° C o menos, entonces debe transferirse a la temperatura ambiente normal para asegurarse de que la manguera de suministro de agua y la manguera de drenaje no se congelen antes de su uso.

- Consulte las etiquetas y la explicación del uso de detergente antes del lavado.


Utilice un detergente que no haga espuma o que produzca menos espuma, adecuado para lavar a máquina correctamente.

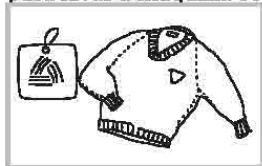


Revisa la etiqueta

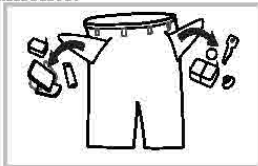

Saque los artículos de los bolsillos

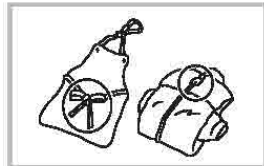


Anuda las tiras largas, cremallera o botón

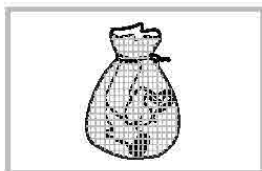

Ponga ropa pequeña en la funda de almohada



Dé vuelta a la tela de pelo largo y fácil de hacer bolitas

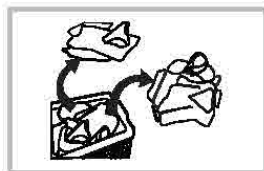

Dé vuelta a la tela de pelo largo y fácil de hacer bolitas


⚠ Advertencia!

- Cuando se lava una sola ropa, puede causar fácilmente una gran excentricidad y dar alarma por un gran desequilibrio. Por lo tanto, se sugiere agregar una o dos prendas más para lavarlas juntas para que el drenaje se pueda realizar sin problemas.

- No lave la ropa en contacto con queroseno, gasolina, alcohol y otros materiales inflamables.

OPERACIONES

- Dispensador de detergente
- I Detergente de prelavado
- II Detergente de lavado principal
- ⊗ Suavizante

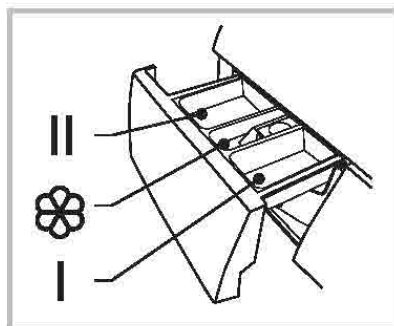

Saque el dispensador

① Cuidado!


- Solo es necesario agregar detergente en el "caso I" después de seleccionar el prelavado para máquinas con esta función.

📌 Nota!

- En cuanto al detergente o aditivo aglomerado o viscoso, antes de verterlos en la caja de detergente, se sugiere usar un poco de agua para diluir para evitar que la entrada de la caja de detergente se bloquee y se desborde mientras se llena el agua.
- Elija el tipo de detergente adecuado para las distintas temperaturas de lavado para obtener el mejor rendimiento de lavado con menos consumo de agua y energía.

OPERATIONS

■ Control Panel

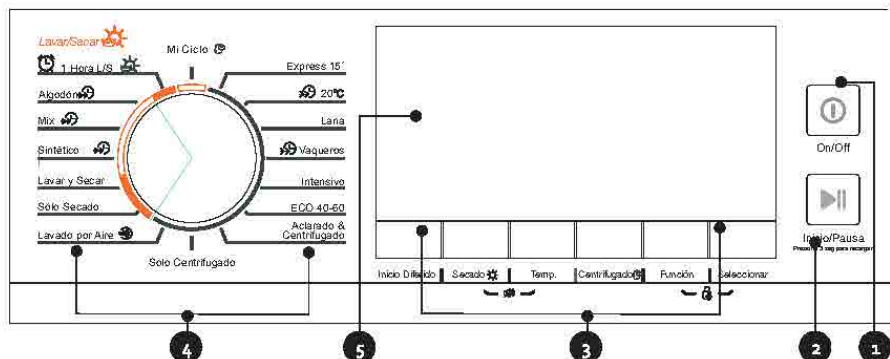

📌 Nota!

- La tabla es solo de referencia, consulte el producto real como estándar.

1 Apagar

El producto está apagado.

2 Inicio / Pausa

Presione el botón para iniciar o pausar el ciclo de lavado.

3 Opciones

Esto le permite seleccionar una función adicional y se iluminará cuando se seleccione.

4 Programas

Disponible según el tipo de ropa.

5 Display

The display shows the settings, estimated time remaining, options, and status messages for your washer. The display will remain on through the cycle.

📌 Nota!

- Cuando finaliza el programa, las luces de Pausa / Inicio y Bloqueo de puerta parpadean.

■ Opciones

Delay

Retrasar

Configure la función Delay:

1. Seleccione un programa; 2. Presione el botón Retraso para elegir el tiempo (el tiempo de retraso es 0-24 H.); 3. Pulse [Inicio / Pausa] para iniciar la operación de retardo.



Elija el tiempo de configuración del programa

Inicio

Cancele la función Delay:

Presione el botón [Retardo] hasta que la pantalla sea oH. Debe presionarse antes de iniciar el programa. Si el programa ya se inició, debe apagar el programa para restablecer uno nuevo.

❗ Cuidado

- Si hay alguna interrupción en la fuente de alimentación mientras la máquina está funcionando, una memoria especial almacena el programa seleccionado y cuando se reinicia la energía, el programa continuará.



Prelavado

La función de prelavado puede obtener un lavado adicional antes del lavado principal, es adecuada para lavar el polvo que sube a la superficie de la ropa; debe poner detergente en el estuche (I) cuando lo seleccione.



Lavado extra

La ropa muy sucia puede elegirla, seleccionarla puede aumentar el tiempo de lavado y la intensidad para aumentar el efecto de lavado.



Lavado rápido

La función puede disminuir el tiempo de lavado.



Enjuague adicional

La ropa se someterá a un enjuague adicional una vez que la seleccione.



My Cycle

Memorizar el programa de uso frecuente.

Después de elegir el programa y configurar las opciones, presione [Temp.] 3 seg. antes de empezar a lavar. El curso de ajuste predeterminado es Algodón.



Anti arruga

La función anti-arrugas se puede utilizar para reducir las arrugas de la ropa.

OPERACIONES



Recargar

Esta operación se puede ejecutar durante el proceso de lavado. Cuando el tambor todavía está rodando y hay una gran cantidad de agua con alta temperatura en el tambor. El estado es inseguro y la puerta no se puede abrir a la fuerza. Para presionar [Inicio / Pausa] durante 3 segundos, para recargar y comenzar a agregar ropa en la función intermedia. Siga los pasos a continuación:

1. Espere hasta que el tambor deje de girar.
2. La cerradura de la puerta está desbloqueada.
3. Cierre la puerta cuando vuelva a cargar la ropa y presione el botón [Inicio / Pausa].



Presione [Inicio / Pausa] 3seg.

Recargar la ropa

Comenzar



Seco

Presione el botón Dry continuamente para elegir el nivel de secado: Extra Dry / Normal Dry (Normal) / Gentle Dry (Soft).

- ☀ Extra Dry: Necesitamos usar ropa inmediatamente, podemos elegir esta función
- ☀ Normal Dry (Normal): El procedimiento de secado normal
- ☀ Secado suave (suave): solo para secar ligeramente y luego está bien.
- ☀ Secado al aire: la ropa se agita para eliminar el olor peculiar sin agua a alta temperatura.

Nota!

- Consejos de secado
 - La ropa se puede secar después de centrifugar
 - Para asegurar un secado de calidad de los textiles, clasifíquelos según su tipo y la temperatura de secado.
 - Sintético debe establecerse el tiempo de secado adecuado.
 - Si desea planchar la ropa después del secado, déjela un rato.
- Ropa no apta para secar
 - Las prendas especialmente delicadas como cortinas sintéticas, de lana y seda, prendas con inserciones metálicas, medias de nailon, prendas voluminosas como anoraks, cubrecamas, edredones, sacos de dormir y edredones no deben secarse.
 - Las prendas acolchadas con gomaespuma o materiales similares a la gomaespuma no deben secarse a máquina.
 - Los tejidos que contengan residuos de lociones fijas o lacas para el cabello, disolventes para uñas o soluciones similares no deben secarse a máquina para evitar la formación de vapores nocivos.

OPERACIONES

■ Otras funciones

Temp.	Temperatura. Presione el botón para regular la temperatura (Frío, 20 °C, 30 °C, 40 °C, 60 °C, 90 °C)
Function	Opción Seleccionar Seleccione la función Prelavado, Lavado adicional, Lavado adicional, Lavado rápido, Enjuague adicional o Antiarrugas.
Select	Opción Confirmar Confirme la selección de la función Prelavado, Lavado adicional, Lavado rápido, Enjuague adicional o Antiarrugas.
Speed	Velocidad Presione el botón para cambiar la velocidad. 1500:
	Bloqueo para niños Para evitar el mal funcionamiento de los niños. Select Function Presione [Función] y [Seleccionar] 3 seg. hasta el pitido del zumbador.

! Cuidado!

- Solo presione y mantenga presionado los dos botones para liberar el "Bloqueo para niños", incluso para apagar, apagar y finalizar el programa, el "Bloqueo para niños" bloqueará todos los botones excepto el botón de encendido y el botón "Bloqueo para niños".
- Suelte el "Seguro para niños" antes de seleccionar el programa y comenzar lavar.

OPERACIONES

■ Programas

Los programas están disponibles según el tipo de lavandería.

Programmes

1 Hora W/D Para ropa o camisas sintéticas pequeñas, el límite de carga es de 1 kg (aproximadamente 4 camisas).

Lavar y secar El programa energético estándar.

Rápido 15' Programa extra corto de aprox., Adecuado para ropa poco sucia como pequeñas cantidades de ropa.

Secado Selecciónelo para secar la ropa, la temperatura es diferente. El tiempo de secado según la carga.

Aire La ropa se gira para eliminar el olor peculiar sin agua a alta temperatura.

Centrifugado Centrifugado extra con velocidad de centrifugado seleccionable.

Lana Tejidos de lana o lana rica lavables a mano o a máquina. Programa de lavado especialmente suave para evitar que se encojan, pausas más largas del programa (los tejidos descansan en el líquido de lavado).

Mix Carga mixta compuesta por textiles de algodón y sintéticos.
Sintético artículos sintéticos de ceniza, por ejemplo: camisas, abrigos, mezcla. Al lavar los tejidos de punto, la cantidad de detergente se reducirá debido a su estructura de hilo suelto y a la formación de burbujas fácilmente.

ECO 40-60 Predeterminado 40 °C, no seleccionable, apto para lavado de ropa a aproximadamente 40 °C -60 °C.

Intensivo Para aumentar los efectos del lavado, se aumenta el tiempo de lavado.

Algodón Tejidos resistentes, tejidos resistentes al calor de algodón o lino.

MANTENIMIENTO

■ Limpieza y mantenimiento

⚠ Advertencia!

- Antes de que comience el mantenimiento, desenchufe la máquina y cierre el grifo.

Limpieza exterior

El mantenimiento adecuado de la lavadora puede prolongar su vida útil. La superficie se puede limpiar con diluido detergentes neutros no abrasivos cuando sea necesario. Si hay algún desbordamiento de agua, use el paño húmedo para limpiarlo inmediatamente. No se permiten objetos afilados.



📌 Nota!

- El ácido fórmico y sus disolventes diluidos o equivalentes están prohibidos, como alcohol, disolventes o productos químicos, etc.

Limpieza del tambor


Las oxidaciones que hayan dejado los artículos metálicos en el interior del tambor se eliminarán inmediatamente con detergentes sin cloro. Nunca use lana de acero.

📌 Nota!

- No ponga ropa en la lavadora durante la limpieza del tambor.

Limpieza de la junta y el cristal de la puerta

Limpiar el cristal y sellar después de cada lavado.
para quitar pelusas y manchas. Si se acumula pelusa, pueden producirse fugas.
Retire las monedas, botones y otros objetos del sello después de cada lavado.

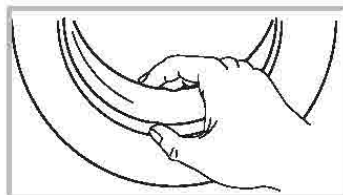

MANTENIMIENTO



Limpieza del filtro de entrada

Nota!

- El filtro de entrada debe limpiarse si hay menos agua.



Lavar el filtro en el grifo

1. Cierre el grifo.
2. Retire la manguera de suministro de agua del grifo.
3. limpiar el filtro.
4. Vuelva a conectar la manguera de suministro de agua.

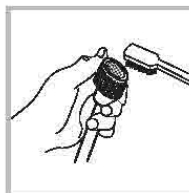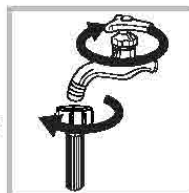

Lavado del filtro en lavadora:

1. Desenrosque el tubo de entrada desde la parte trasera de la máquina.
2. Saque el filtro con unos alicates de punta larga y vuelva a instalarlo después de lavarlo.
3. Utilice el cepillo para limpiar el filtro.
4. Vuelva a conectar el tubo de entrada.

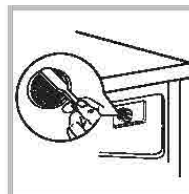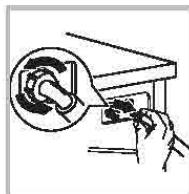


Nota!


- Si el cepillo no está limpio, puede sacar el filtro lavado por separado;
- Vuelva a conectar, abra el grifo.

Limpiar el dispensador de detergente


1. Presione hacia abajo la ubicación de la flecha en la cubierta del suavizante dentro del cajón dispensador.
2. Levante el clip y saque la cubierta del suavizante y lave todas las ranuras con agua.
3. Vuelva a colocar la tapa del suavizante y coloque el cajón en su posición.

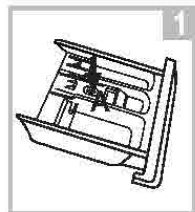


Extraiga el cajón dispensador presionando el botón A

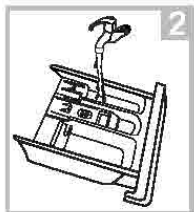

Limpiar el cajón dispensador con agua

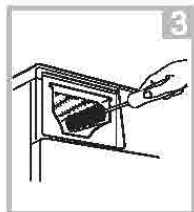

Limpiar el interior del hueco con un cepillo de dientes viejo.

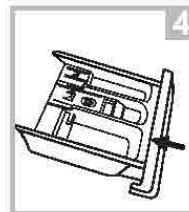

Inserte el cajón dispensador

Nota!


- No utilice alcohol, disolventes o productos químicos para limpiar la máquina.

MANTENIMIENTO

Limpieza del filtro de la bomba de drenaje

⚠ Advertencia!


- ¡Cuidado con el agua caliente!
- Deje que la solución de detergente se enfríe.
- Desenchufe la máquina para evitar descargas eléctricas antes de lavar.
- El filtro de la bomba de drenaje puede filtrar los hilos y pequeñas materias extrañas del lavado.
- Limpie el filtro periódicamente para asegurar el funcionamiento normal de la lavadora.

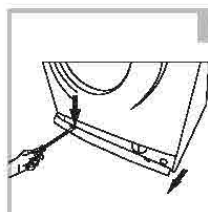


1
Abra el filtro de servicio



2
Abra el filtro girando hacia la izquierda

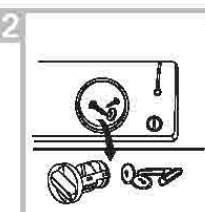

3
Eliminar materia extraña

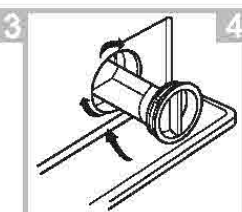

4
Cierre la tapa de la cubierta inferior

⚠ Precaución!

- Asegúrese de que la tapa de la válvula y la manguera de drenaje de emergencia se vuelvan a instalar correctamente; las placas de la tapa deben insertarse alineadas con las placas de los orificios; de lo contrario, se puede filtrar agua;
- Algunas máquinas no tienen manguera de drenaje de emergencia, gire la tapa de la cubierta inferior directamente para que el agua corra hacia el recipiente.
- Cuando el aparato está en uso y dependiendo del programa seleccionado puede haber agua caliente en la bomba. Nunca quite la tapa de la bomba durante un ciclo de lavado, espere siempre hasta que el aparato haya terminado el ciclo y esté vacío. Cuando reemplace la cubierta, asegúrese de que esté bien apretada.

MANTENIMIENTO

■ Solución de problemas

El arranque del aparato no funciona o se detiene durante el funcionamiento. Primero intente encontrar una solución al problema. De lo contrario, comuníquese con el centro de servicio.

Descripción	Razón	Solución
La lavadora no puede arrancar	La puerta no está cerrada correctamente	Reinicie después de cerrar la puerta Compruebe si la ropa está atascada
La puerta no se puede abrir	Seguridad de la lavadora el diseño de protección está funcionando	Desconecte la energía, reinicie el producto
Fuga de agua	La conexión entre la tubería de entrada o la manguera de salida no está apretada	Compruebe y sujete las tuberías de agua. Limpie la manguera de salida
Residuos de detergente en cajetín	El detergente está humedecido o aglomerado	Limpiar y limpiar la caja de detergente
El indicador o la pantalla no se enciende	Desconecte la placa de circuito impreso de alimentación o el arnés tiene un problema de conexión	Compruebe si la alimentación está apagada y el enchufe de alimentación está conectado correctamente
Ruido anormal		Compruebe si se han quitado las fijaciones (pernos) Verifique que esté instalado

Estado de los Indicadores Correspondientes				Descripción	Causa	Solución
Temp 30	Temp 50	Temp 40	Temp 20			
Apagado	Apagado	Apagado	Flash	Problema en el bloqueo de la puerta.	La puerta no está cerrada correctamente.	Rebide después de que la puerta esté cerrada.
					Por favor contacte la asistencia técnica si siguen existiendo problemas.	
Apagado	Apagado	Flash	Apagado	Problema de inyección de agua durante el lavado (el tiempo de inyección excede los 7 minutos).	El grifo está abierto o el agua fluye muy lentamente. El filtro de la válvula de entrada está obstruido. El tubo de entrada está doblado. No existe suministro de agua.	Abra el grifo o espere hasta que el suministro de agua se restablezca. Verifique el filtro de la válvula de entrada. Enderece el tubo de agua. Verifique los demás grifos de la habitación.
					Por favor contacte la asistencia técnica si siguen existiendo problemas.	
Apagado	Apagado	Flash	Flash	Problema de drenaje durante el lavado (tiempo de drenaje excede los 3 minutos).	La manguera de salida está obstruida o está doblada. La bomba de drenaje está obstruida.	Lave y enderece la manguera de salida. Lave el filtro de la bomba de drenaje.
					Por favor contacte la asistencia técnica si siguen existiendo problemas.	
Por favor contacte la asistencia técnica si existe cualquier otro problema.						


MANTENIMIENTO

■ Especificaciones técnicas

Power Supply 220-240V~,50Hz

MAX.Current 10A

Standard Water Pressure 0.05MPa~1MPa

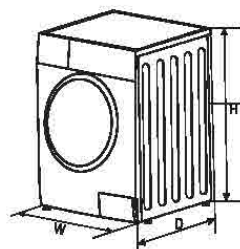

Model	Washing Capacity Drying Capacity	Dimension (W*D*Hmm)	Net Weight	Rated Power
Serie 7-10715 LS	10.0/7.0kg	595*565*850	74kg	1950W

MAINTENANCE

Nombre o marca comercial del proveedor:

Dirección del proveedor (*):

Identificador del modelo: Serie 7-8614 LS

Parámetros generales del producto:

Parámetro	Valor		Parámetro	Valor	
Capacidad nominal (a) (kg)	6,0		Dimensiones en cm	Altura	85
				Anchura	60
Capacidad nominal para lavar (a) (kg)	8,0			Profundidad	47
Energy Efficiency Index	EEI _{lw} (*)	60,0	Clase de eficiencia energética (*)	EEI _{lw} (*)	B
	EEI _{wd} (b)	82.0		EEI _{wd} (b)	E
Índice de eficiencia de lavado	I _w (*)	1,04	Eficacia del lavado (g/kg secar textil) (*)	I _r (*)	5
	J _w (b)	1.04		J _r (b)	5
Consumo de energía en kWh por ciclo para lavado basado en el programa ECO 40-60. El consumo energético real dependerá de cómo se utilice el aparato.	0,544		Consumo de energía en kWh por ciclo para lavado y secado, a la combinación de completa carga y media carga. El consumo energético real dependerá de cómo se utilice el aparato.	3.768	
Consumo de agua en litros por ciclo basado en el programa ECO 40-60. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	48		Consumo de agua en litros por ciclo para lavado y secado a la combinación de completa carga y media carga. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	90	
Temperatura máxima en el interior del tejido tratado (*) (°C)	Capacidad nominal para lavar	38	Contenido de humedad restante (*) (%)	Capacidad nominal	53
	Media	38		Media	53
	Un cuarto	21		Un cuarto	53

Velocidad de centrifugado (a) (rpm)	Capacidad nominal para lavar	1400	Clase de eficiencia para centrifugado y secado (*)	B	
	Media	1400			
	Un cuarto	1400			
Duración del programa ECO 40-60 (*) (h:min)	Capacidad nominal para lavar	3:38	Duración para lavar y secar (*) (h:min)	Capacidad nominal	9:30
	Media	2:48		Capacidad media	6:40
	Un cuarto	2:48			
Ruido acústico aéreo emitido en la fase de centrifugado para el ciclo de lavado de ECO 40-60 (*) (dB(A) re 1 pW)	76		Clase de ruido acústico aéreo emitido para el ciclo de lavado de ECO 40-60 (*) (fase de centrifugado)	B	
Tipo	Built-in /Free standing		Free standing		
Modo apagado (W)	0,50		Modo de espera (W)	N/A	
Inicio retardado (W) (si procede)	4,00		En espera en red (W) (si procede)	N/A	
Duración mínima de la garantía ofrecida por el proveedor (*):					
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado			NO		
Información adicional:					
Enlace al sitio web del proveedor, donde se encuentra la información del punto 9 del Anexo II del Reglamento de la Comisión (UE) 2019/2023 (1) (b):					
(*) Para el programa ECO 40-60.					
(*) Los cambios en estos elementos no se considerarán pertinentes a los efectos del apartado 4 del artículo 4 del Reglamento (UE) 2017/1369.					
(*) Si la base de datos de productos genera automáticamente el contenido definitivo de esta celda, el proveedor no tendrá que introducir estos datos.					

MAINTENANCE

Nombre o marca comercial del proveedor:

Dirección del proveedor (*):

Identificador del modelo: Serie 7-10715 LS

Parámetros generales del producto:

Parámetro	Valor		Parámetro	Valor	
Capacidad nominal (a) (kg)	7,0		Dimensiones en cm	Altura	85
				Anchura	60
Capacidad nominal para lavar (a) (kg)	10,0			Profundidad	57
Energy Efficiency Index	EEI _{lw} (*)	60,0	Clase de eficiencia energética (*)	EEI _{lw} (*)	B
	EEI _{wd} (b)	67,0		EEI _{wd} (b)	D
Índice de eficiencia de lavado	I _w (*)	1,04	Eficacia del lavado (g/kg secar textil) (*)	I _r (*)	5
	J _w (b)	1,04		J _r (b)	5
Consumo de energía en kWh por ciclo para lavado basado en el programa ECO 40-60. El consumo energético real dependerá de cómo se utilice el aparato.	0,593		Consumo de energía en kWh por ciclo para lavado y secado, a la combinación de completa carga y media carga. El consumo energético real dependerá de cómo se utilice el aparato.	3.430	
Consumo de agua en litros por ciclo basado en el programa ECO 40-60. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	52		Consumo de agua en litros por ciclo para lavado y secado a la combinación de completa carga y media carga. El consumo real de agua dependerá de cómo se utilice el aparato y de la dureza del agua.	100	
Temperatura máxima en el interior del tejido tratado (*) (°C)	Capacidad nominal para lavar	38	Contenido de humedad restante (*) (%)	Capacidad nominal	53
	Media	36		Media	53
	Un cuarto	23		Un cuarto	53

Velocidad de centrifugado (a) (rpm)	Capacidad nominal para lavar	1500	Clase de eficiencia para centrifugado y secado (*)	B	
	Media	1500			
	Un cuarto	1500			
Duración del programa ECO 40-60 (*) (h:min)	Capacidad nominal para lavar	3:59	Duración para lavar y secar (*) (h:min)	Capacidad nominal	9:40
	Media	3:00		Capacidad media	7:00
	Un cuarto	3:00			
Ruido acústico aéreo emitido en la fase de centrifugado para el ciclo de lavado de ECO 40-60 (*) (dB(A) re 1 pW)	80		Clase de ruido acústico aéreo emitido para el ciclo de lavado de ECO 40-60 (*) (fase de centrifugado)	C	
Tipo	Built-in /Free standing		Free standing		
Modo apagado (W)	0,50		Modo de espera (W)	N/A	
Inicio retardado (W) (si procede)	4,00		En espera en red (W) (si procede)	N/A	
Duración mínima de la garantía ofrecida por el proveedor (*):					
Este producto ha sido diseñado para liberar iones de plata durante el ciclo de lavado			NO		
Información adicional:					
Enlace al sitio web del proveedor, donde se encuentra la Información del punto 9 del Anexo II del Reglamento de la Comisión (UE) 2019/2023 (1) (b):					
(*) Para el programa ECO 40-60.					
(*) Los cambios en estos elementos no se considerarán pertinentes a los efectos del apartado 4 del artículo 4 del Reglamento (UE) 2017/1369.					
(*) Si la base de datos de productos genera automáticamente el contenido definitivo de esta celda, el proveedor no tendrá que introducir estos datos.					

Note!

- Configuración del programa para la prueba de acuerdo con la norma aplicable En60456 para lavado.
- Configuración del programa para la prueba de acuerdo con la norma aplicable En50229 para lavar y secar.
- Cuando utilice los programas de prueba, lave la carga especificada utilizando la velocidad máxima de centrifugado.
- Los parámetros reales dependerán de cómo se use la aplicación y tal vez sean diferentes con los parámetros de la tabla mencionada anteriormente.
- La lavadora doméstica está equipada con un sistema de administración de energía. La duración del tiempo del modo de espera es menos de 10 minutos.
- Las emisiones de ruido durante el lavado / centrifugado para el ciclo de lavado estándar a plena carga.

Observaciones:

La clase de eficiencia energética es de A (mayor eficiencia) a D (menor eficiencia) Consumo de energía por año, basado en 220 ciclos de lavado estándar para programa estándar a 60 ° C y 40 ° C a carga completa y parcial, y el consumo de la modos de bajo consumo. El consumo de energía real dependerá de cómo se utilice el aparato.

Consumo de agua por año basado en 220 ciclos de lavado estándar para programa estándar a 60 ° C y 40 ° C con carga total y parcial. El consumo real de agua dependerá de cómo se utilice el aparato.

Clase de eficiencia de centrifugado de G (menos eficiente) a A (más eficiente).

El programa estándar de 60 ° C y el programa estándar de 40 ° C son los programas de lavado estándar. Estos programas son adecuados para limpiar ropa de algodón con suciedad normal y son los programas más eficientes en términos de consumo combinado de energía y agua para lavar ese tipo de ropa de algodón. La temperatura real del agua puede diferir de la temperatura del ciclo declarada.

Elija el tipo de detergente adecuado para las distintas temperaturas de lavado para obtener el mejor rendimiento de lavado con menos consumo de agua y energía.

 attractive

 reliable

 smart

sauber

Lavasecadora Serie 7-8614 LS / Serie 7-10715 LS Manual de usuario

Washing & dryer machine Serie 7-8614 LS / Serie 7-10715 LS User manual.

 useful

 efficient

 connected

 **sauber**

CONTENTS

SAFETY INSTRUCTIONS

- Safety Instructions 2

INSTALLATION

- Product Description 9
- Installation 10

OPERATION

- Quick Start 13
- Before Each Washing 15
- Detergent Dispenser 16
- Control Panel 18
- Programmes..... 20
- Option..... 25

MAINTENANCE

- Cleaning and Care 29
- Trouble Shooting 32
- Technical Specifications 33
- Product Fiche 34

SAFETY INSTRUCTIONS

■ Safety Instructions

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.

Warning!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in death or serious injuries unless it's avoided.

Caution!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries or damage to property and the environment.

Note!

This combination of symbol and signal word indicates a potentially dangerous situation which may result in slight or minor injuries.

Warning!

ELECTRIC SHOCK HAZARD

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Risk of electric shock!

SAFETY INSTRUCTIONS

- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children 3 years and under shall be kept away from the appliance or continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

INSTALLATION LOCATION AND SURROUNDING

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- Do not install the machine on a carpet floor. The obstruction of the openings by a carpet can damage the machine.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the washer dryer.

SAFETY INSTRUCTIONS

- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see „Maintenance - Cleaning of drain pump filter“) to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.

INSTALLATION

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Before using the washer dryer, the product shall be calibrated.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- Max. Inlet water pressure 1 MPa. Min. inlet water pressure 0.05 MPa.

ELECTRICAL CONNECTION

- Make sure the supply cable is not trapped by the machine, it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the “Technical specifications” table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.

SAFETY INSTRUCTIONS

•Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

Warning!

- Don't use multiple plugs or extension cords.
- The appliance must not have an external switching device such as a timer or connected to a circuit that is regularly switched on and off.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

WATER CONNECTIONS

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak close the water tap and get it repaired. Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

SAFETY INSTRUCTIONS

OPERATION AND MAINTENANCE

Warning!

- Never stop the washer dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat can dissipate.
- The washer dryer is not to be used if industrial chemicals have been used for cleaning. Risk of explosion.

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance.
- Thoroughly rinse items that have been washed by hand.
- Do not dry unwashed items in the appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine
- Fabric softeners or similar products should be used as recommended in their instructions.
- Never try to open the door forcefully. The door will unlock shortly after the end of a cycle.
- Please do not close the door with excessive force. If it is found difficult to close the door, please check if the clothes are properly inserted and distributed.

SAFETY INSTRUCTIONS

- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. The producer will not be responsible for damages caused by the intervention of not authorized persons.

TRANSPORT

- Before Transport:
 - Bolts shall be reinstalled to the machine by a specialized person
 - Accumulated water shall be drained out of the machine
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

INTENDED USE

The product is intended only for home use and for textiles in household amounts suitable for machine washing and drying. This appliance is for indoor use only and not intended for built in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injuries that may result of it.

- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
 - Areas for communal use in blocks of flats or in launderettes.

SAFETY INSTRUCTIONS


Packaging/Old appliance



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the collection systems or contact the retailer where the product was purchased. They return and can take this product for environmental safe recycling.

INSTALLATION


■ Product Description

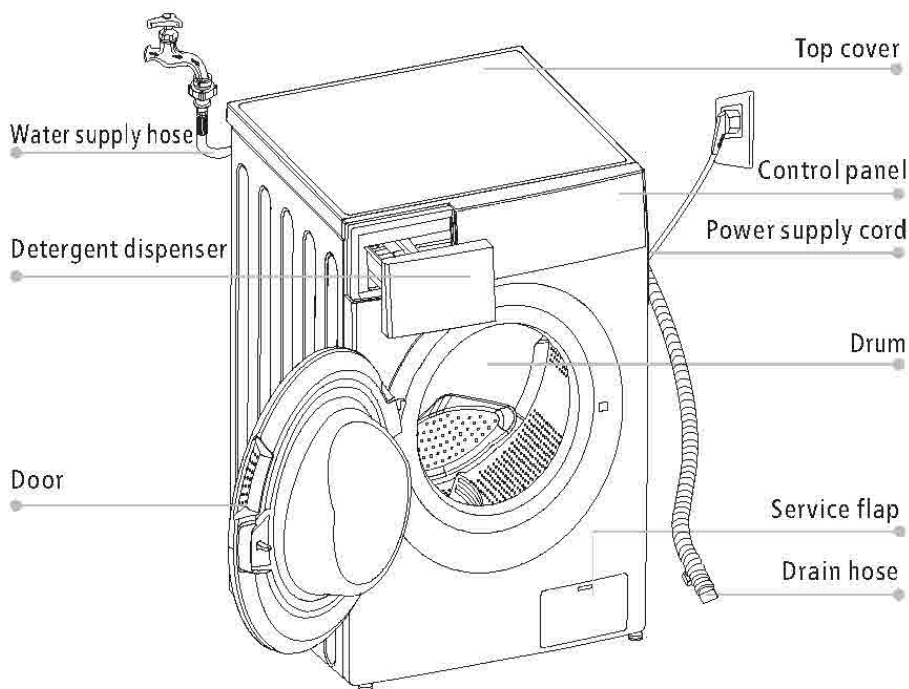

Note!

- The product picture is for illustration only, please refer to real product as reference.

Accessories

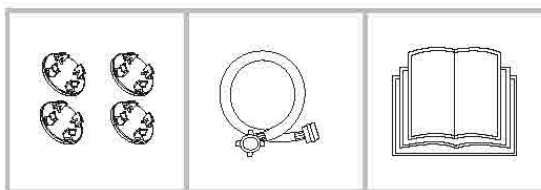

4 x Cover caps

1 x Supply hose
cold water

1 x Owner's manual


INSTALLATION

■ Installation

Installation area


⚠ Warning!

- Stability is important to prevent the product from wandering! Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture

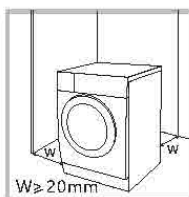

Before installing the machine, the location characterized as follows shall be selected:


1. Rigid, dry, and level surface
2. Avoid direct sunlight
3. Sufficient ventilation
4. Room temperature is above 0°C
5. Keep far away from the heat sources such as coal or gas burning appliances.

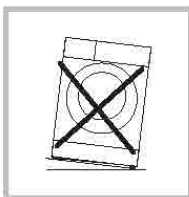

Unpacking the washer dryer

⚠ Warning!

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.

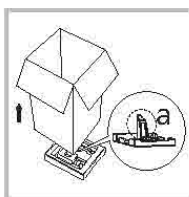

1. Remove the cardboard box and styrofoam packing.
2. Lift the washer dryer and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

INSTALLATION

Remove transport bolts

Warning!


- You must remove the transport bolts from the backside before using the product.



Loosen the 4 transport bolts with a spanner.



Remove the bolts including the rubber parts and keep them for future use.

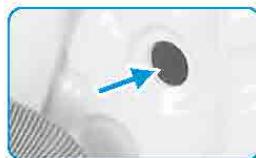

Close the holes using the cover caps.

Levelling the washer dryer

Warning!

- The lock nuts on all four feet must be screwed tightly against the housing.



1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level and steady.

Connect the water supply hose

Warning!

To prevent leakage or water damage, follow the instructions in this chapter

- Do not kink, crush or modify water inlet hose.



Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.



Note!

- Connect manually, do not use tools. Check if the connections are tight.

INSTALLATION


Drain Hose

⚠ Warning!


- Do not kink or protract the drain hose.
- Position drain hose properly ,otherwise damage might result of water leakage.

There are two ways to place the end of drain hose:

1.Put it into the water trough.

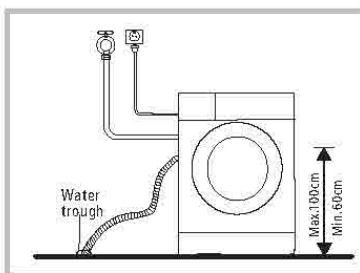

2.Connect it to the branch drain pipe of the trough.

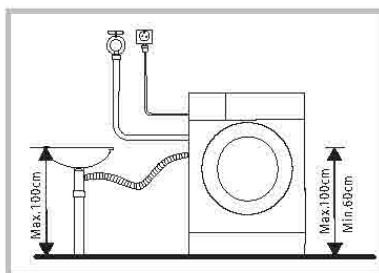

OPERATION

■ Quick Start

⚠ Caution!

- Before washing, please make sure the washer dryer is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, start the Cotton program at 90°C without laundry and detergent.

📌 Calibration


It's recommended to calibrate the washer dryer, so that provide the best performance.

The appliance is able to detect the amount of laundry loaded. This function is optimizing the product performance by minimizing energy and water consumption, saving you money and time. For this reason it's recommended to calibrate the appliance for best use.

- 1- Remove all accessories from the drum and close the door;
- 2- Insert the mains plug to the socket;
- 3- Switch on the washer dryer and press "Delay" and "Temp." simultaneously for 10 seconds until "t19" is displayed;
- 4- Press [▶||] to start the appliance and wait till "*****" is displayed.

OPERATION


1. Before Washing

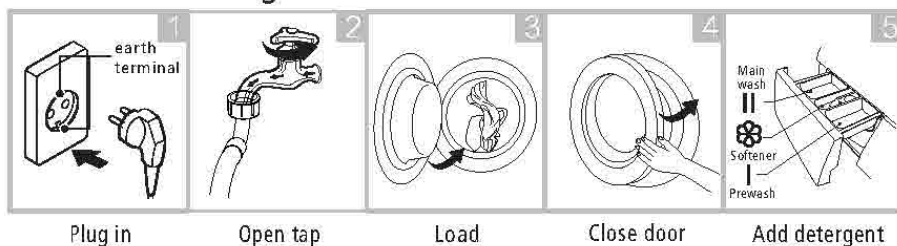

Note!

- Detergent need to be added in compartment I if the pre-wash function is selected.

2. Washing

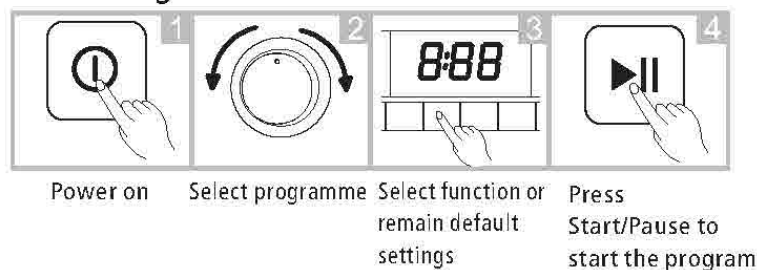


3. After Washing

Buzzer beep and "End" on display.


OPERATION

■ Before Each Washing


- The ambient temperature of the washer dryer should be 5-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine washing properly.

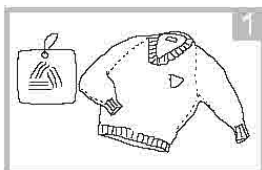


Check the care label

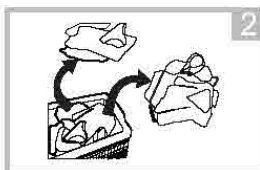


Sort laundry according to color and textile type

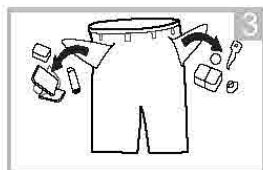


Take all items out of the pockets

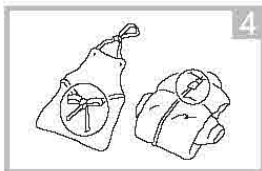

Tie together long textile strips and belts, close zips and buttons

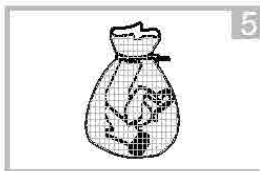

Put small items into a laundry bag

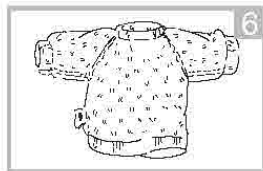

Turn easy-pilling and long-pile fabric inside out


⚠ Warning!

- Do not wash or dry articles that have been cleaned in, washed in, soaked in, or dabbed with combustible or explosive substances like wax, oil, paint, gasoline, alcohol, kerosene, and other flammable materials.
- Washing single clothes items may easily create big eccentricity and cause alarm due to unbalance. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.

OPERATION

■ Detergent Dispenser

- I Pre wash
- II Main wash
- ☼ Softener
- ☼ Release button to pull out the dispenser

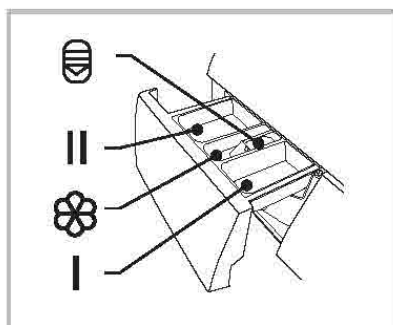

ⓘ Caution!

- Detergent only need to be added in "compartment I "after selecting pre-wash function.

Programme	I	II	☼	Programme	I	II	☼
1 Hour W/D		●	○	Rinse & Spin			○
Cotton	○	●	○	ECO 40-60		●	○
Mix	○	●	○	Intensive		●	○
Synthetic	○	●	○	Jeans	○	●	○
Wash and Dry		●	○	Wool		●	○
Dry Only				20°C		●	○
Air Wash				Quick 15'		●	○
Spin Only							

● Means must ○ Means optional

Detergent Recommendation

Recommended washing detergent	Wash cycles	Washing temp.	Type of laundry and textile
Heavy-duty detergent with bleaching agents and optical brighteners	Cotton, ECO 40-60, Mix, Intensive	20/30/40/60	White laundry made from boil-proof cotton or linen
Colour detergent without bleaching agent and optical brighteners	Cotton, ECO 40-60, Mix, Intensive	Cold/20/30/40	Coloured laundry made from cotton or linen
Color or mild detergent without optical brighteners	Synthetic	Cold/20/30/40	Coloured laundry made from easy care fibres or synthetic materials
Mild washing detergent	Synthetic	20/30	Delicate textiles, silk, viscose
Special wool detergent	Wool	20/30	Wool

Note!

- Agglomerating or ropy detergent or additive can be diluted in some water before pouring it into the detergent dispenser, to avoid its inlet to get blocked and thus cause a water overflow.
- Please choose the suitable type of detergent to get a maximum of washing performance and a minimum of water and energy consumption
- To achieve the best cleaning result a proper detergent dosing is important.
- Use a reduced detergent amount if the drum is not filled completely.
- Always adjust the amount of detergent to the water hardness, if your tap water is soft, use less detergent.
- Dose according to how dirty your laundry is, less dirty clothes require less detergent.
- Highly concentrated (compact detergent) requires particularly accurate dosing.

Following symptoms are a sign of detergent overdosing:

- heavy foam formation
- poor washing and rinsing result


Following symptoms are a sign of detergent underdosing:

- laundry turns grey
- built-up of limescale deposits on the drum, the heating element and/or the laundry

OPERATION

Control Panel

Model: Serie 7-8614 LS

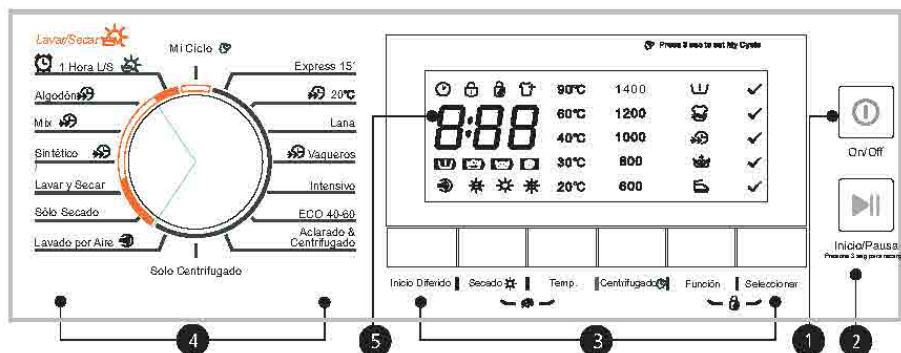

1 On/Off

Turn the appliance on and off.

2 Start/Pause

Start or pause your programme.

3 Option


This allows you to select additional functions and will light when selected.

4 Programmes

Available according to the laundry type.

5 Display


The display shows settings, estimated remaining time, options and status messages.

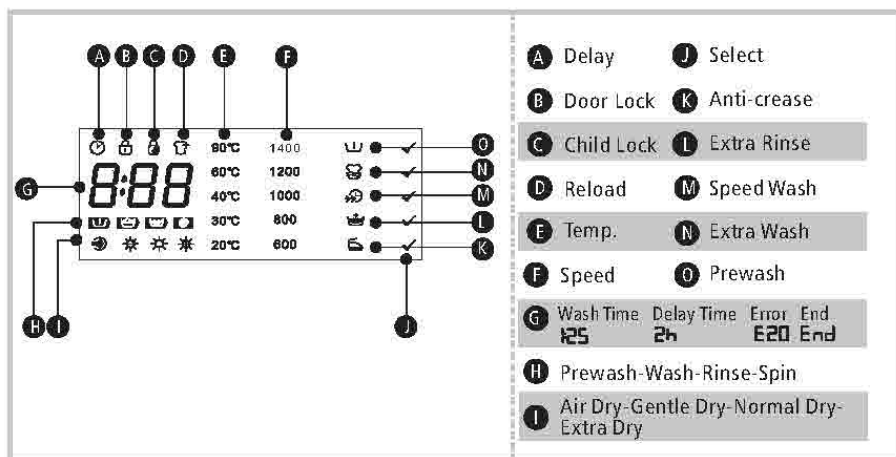

OPERATION

- Control Panel

Model: Serie 7-10715 LS

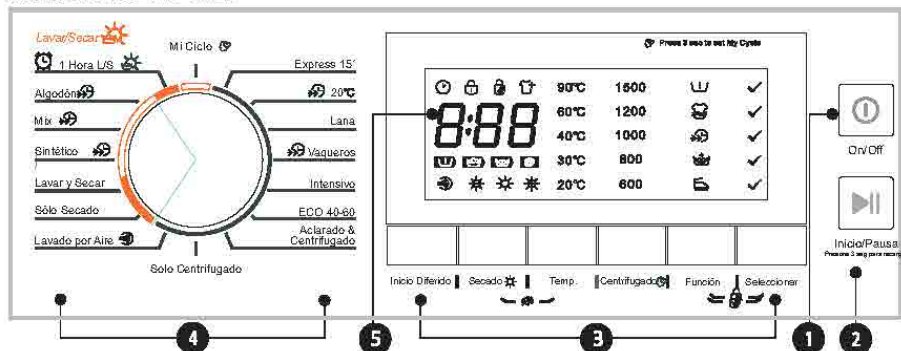

1 On/Off

Turn the appliance on and off.

2 Start/Pause

Start or pause your programme.

3 Option


This allows you to select additional functions and will light when selected.

4 Programmes

Available according to the laundry type.

5 Display

The display shows settings, estimated remaining time, options and status messages.

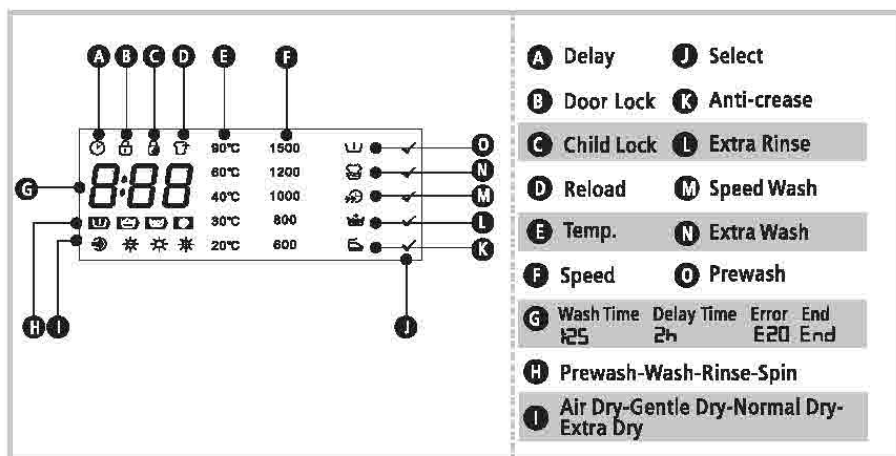

OPERATION

■ Programmes

Model: Serie 7-8614 LS/Serie 7-10715 LS

Programme		Load(kg)		Display Time
		8.0	10.0	8.0/10.0
☀	1 Hour W/D	1.0/1.0	1.0/1.0	0:58
☀	Cotton	8.0/6.0	10.0/7.0	2:59
☀	Mix	8.0/6.0	10.0/7.0	0:58
☀	Synthetic	4.0/4.0	5.0/5.0	2:45
☀	Wash and Dry	6.0/6.0	10.0/7.0	5:11/5:30
☀	Dry Only	-/6.0	-/7.0	4:14/4:33
	Air Wash	1.0	1.0	0:30
	Spin Only	8.0	10.0	0:12
	Rinse & Spin	8.0	10.0	0:20
	ECO 40-60	8.0	10.0	3:35/3:53
	Intensive	8.0	10.0	3:48
	Delicate	2.0	2.5	0:50
	Wool	2.0	2.0	1:07
	20°C	4.0	5.0	1:01
	Quick 15'	2.0	2.5	0:15

OPERATION

■ Programmes

Serie 7-8614 LS

Cycle	Nominal capacity in kg	Cycle duration in hours and minutes	Energy consumption in kWh/operalling cycle	Water consumption in mliter//operalling cycle	Highest temperature ature °C	residual moitsure in % /spin speed
20°C	4.0	1:01	0.15	50	20	65% / 1000
Cotton(60°C)	8.0	3:44	1.498	70	60	53% / 1400
Intensive	8.0	3:48	1.100	70	40	70% / 800
Mix	8.0	1:20	0.75	65	40	70% / 800
Quick 15'	2.0	0:15	0.030	40	Cold	75% / 800
ECO40-60	8.0	3:38	0.871	64	40	53%/1400
	4.0	2:48	0.530	46.3	33	53%/1400
	2.0	2:48	0.205	33.4	23	53%/1400
Wash and Dry	6.0	9:30	4.680	108.4	39	0%/1400
	3.0	6:40	2.400	63.5	27	0%/1400

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the ECO 40-60 programme and the Wash and Dry cycle are indicative only.
- Concerning to Regulation(EU) No 1061/2010,
The EU energy efficiency class is: A
Energy test program: Intensive;Speed:The highest speed;Temp.: 60°C;
Other as the default.
Load for 8.0Kg machine:6.0Kg.
- Concerning to Regulation(EU) 2019/2023,
The EU energy efficiency class is: E
Energy test program: ECO 40-60/Wash & Dry.
ECO 40-60: as the default
Half load for 8.0Kg machine:4.0Kg.
Quarter load for 8.0Kg machine:2.0Kg.
Wash and dry : dry level: ~~★~~(Extra Dry), Other as the default.
Load for 8.0Kg machine:6.0Kg.
Half load for 6.0Kg machine:3.0Kg.

OPERATION

■ Programmes

Serie 7-10715 LS

Cycle	Nominal capacity in kg	Cycle duration in hours and minutes	Energy consumption in kWh/operalling cycle	Water consumption in mliter//operalling cycle	Highest temperature atature °C	residual moisiture in % /spin speed
20°C	5.0	1:01	0.25	60	20	65% / 1000
Cotton(60°C)	10.0	3:44	1.708	80	60	53% / 1500
Intensive	10.0	3:48	1.305	80	40	70% / 800
Mix	10.0	1:20	0.85	80	40	70% / 800
Quick 15'	2.0	0:15	0.030	40	Cold	75% / 800
ECO 40-60	10.0	3:59	1.058	73	38	53%/1500
	5.0	3:00	0.668	53	36	53%/1500
	2.5	3:00	0.240	38	23	53%/1500
Wash and dry	7.0	9:40	4.190	115	27	0/1500
	3.5	7:00	2.291	77	21	0/1500

- The above data is for reference only, and the data may change due to different actual use conditions.
- The valves given for programmes other than the ECO 40-60 programme and the Wash and Dry cycle are indicative only.
- Concerning to Regulation(EU) No 1061/2010,
The EU energy efficiency class is: A
Energy test program: Intensive;Speed:The highest speed;Temp.: 60°C;
Other as the default.
Load for 10.0Kg machine:7.0Kg.
- Concerning to Regulation(EU) 2019/2023,
The EU energy efficiency class is: D
Energy test program: ECO 40-60/Wash & Dry.
ECO 40-60: as the default
Half load for 10.0Kg machine:5.0Kg.
Quarter load for 10.0Kg machine:2.5Kg.
Wash and dry : dry level: ~~★~~(Extra Dry), Other as the default.
Load for 10.0Kg machine:7.0Kg.
Half load for 7.0Kg machine:3.5Kg.

OPERATION

- 1) Maximum amount of dry textiles that can be treated in the respective cycle
- 2) The highest temperature reached by the laundry in the wash cycle for at least 5 minutes.
- 3) Residual moisture after the wash cycle in water content percent and the spin speed at which this was achieved.
- 4) The ECO 40-60 programme is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle. This programme is used to assess the compliance with the regulation (EU) 2019/2023.
- 5) The Wash and Dry programme, dry level setting “” Extra Dry is able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle, and to dry it in such a way that it can be immediately stored in a cupboard. This programme is used to assess the compliance with the regulation (EU) 2019/2023.

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

Loading the household washer-dryer up to the capacity indicated for the respective programmes will contribute to energy and water savings.

Noise and remaining moisture content are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme. The machine will continue the programme when the power supply is re-established.

OPERATION

■ Programmes

Programmes are available according to the laundry type.

Programmes	
1 Hour W/D	For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts).
Cotton	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
Mix	Mixed load consisting of textiles made of cotton and synthetics.
Synthetic	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
Wash and Dry	The standard energy program.
Dry Only	Select it to dry clothes, the temperature is different. The drying time according to the load.
Air Wash	Clothes is roated to remove peculiar smell without water in high temperature.
Spin Only	Extra spin with selectable spin speed.
Rinse & Spin	Extra rinse with spin.
ECO 40-60	This program is specially designed for washing duvet coats. Default 40°C, not selectable, suitable for laundry washing at about 40°C-60°C.
Intensive	To increase the washing effects, washing time is increased.
Jeans	For delicate, washable textiles, e.g. made of silk, satin, synthetic fibres or blended fabrics.
Wool	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
20°C	20°C default, can choose cold water.
Quick 15'	Extra short programme approx, suitable for lightly soiled washing as a small amounts of laundry.

OPERATION

■ Option

Cycle	Default Temp.(°C)	Default spin speed in rpm		Additional functions
		1400	1500	
Quick 15'	Cold	800	800	🌀
20°C	20	1000	1000	🌀, 🌊, 🏠, 📏
Wool	40	600	600	🌀, 🏠
Jeans	30	1000	1000	🌀, 🌊, 🏠, 📏, 📏
Intensive	40	800	800	🌀
ECO 40-60	--	1400	1500	🌀
Rinse & Spin	--	1000	1000	🌀, 🏠
Spin Only	--	1000	1000	🌀
Air Wash	--	--	--	🌀
Dry Only	--	1200	1200	🌀
Wash and Dry	--	1400	1500	🌀
Synthetic	40	1200	1200	🌀, 🌊, 🏠, 📏
Mix	40	800	800	🌀, 🌊, 🏠, 📏
Cotton	40	1400	1500	🌀, 🌊, 🏠, 📏
1HourW/D	Cold	1400	1500	🌀

📌 Note!

- For the maximum spin speed, program time, and other details of the ECO 40-60 and Wash and Dry programs, please refer to the content on the Product Fiche page.
- The table shows which cycle offers which options for adjustment. If an adjustment is not possible for a cycle.

OPERATION

Delay

Delay

Set the Delay function:

1. Select a programme; 2. Press the Delay button to choose the time(the delaying time is 0-24 H.);
3. Press [Start/Pause] to commence the delay operation



Choose the Programme



Setting time



Start

Cancel the Delay function:

Press the [Delay] button until the display be 0H. It should be pressed before starting the programme. If the programme already started, should switch off programme to reset a new one.

⚠ Caution!

- If there is any break in the power supply while the machine is operating, a special memory stores the selected programme and when the power is restarted, the program will continue.



Pre Wash

The Prewash function can get an extra wash before main wash, it is suitable for washing the dust rises to surface of the clothes; You need to put detergent into the Case (I) when select it.



Extra Wash

For very dirty clothes choose this feature, this will increase the washing time and intensity to improve the washing effect.



Speed Wash

The function can decrease the washing time.



Extra Rinse

The laundry will undergo extra rinse once after you select it.



My Cycle

To memory the frequently used programme.

After choosing the programme and setting the options, press [Spin] 3 sec. before start to wash. The default setting course is Cotton.



Anti-Crease

Anti-Crease function can be used to reduce the wrinkles of clothes.

Temp.

Temp.

Press the button to regulate the temperature (Cold, 20°C, 30°C, 40°C, 60°C, 90°C)

OPERATION



Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To press [Start/Pause] for 3 sec. to reload, and start the clothes adding in the midway function. Please follow the steps as bellow:

- 1.Wait until the drum stops rotation.
- 2.The door lock is unlocked.
- 3.Close the door when the clothes are reloaded and press the [Start/Pause] button.



Press [Start/Pause] 3sec.



Reload the clothes



Start



Dry

Press the Dry button continuously to choose the dry level: Extra Dry/Normal Dry (Normal)/ Gentle Dry(Soft).

- ☀ Extra Dry:Need to wear clothes immediately ,we can choose this function
- ☀ Normal Dry(Normal):The normal dry procedure
- ☀ Gentle Dry(Soft):Only to dry slightly and then is just ok .
- ☀ Air Dry: Clothes is roated to remove peculiar smell without water in high temperature.



Note!

- Drying hints
 - Clothes could be dried after spinning
 - To ensure quality dry the textiles, please classify them according to their kinds and the drying temperature.
 - Synthetic should be set the proper drying time .
 - If you want to iron the clothes after drying, please put them for a while.
- Clothes not suitable for drying
 - Particularly delicate items such as synthetic curtains,woolen and silk, clothes with metal inserts,nylon stockings,bulky clothes,such as anoraks,bedcovers,quilts,sleeping bags and duvets must not be dried.
 - Clothes padded with foam-rubber or materials similar to foam-rubber must not be machine dried.
 - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

OPERATION

	Option Confirm Select the Pre Wash,Extra Rinse,Extra Wash,Night Wash or Anti-crease function.
	Option Confirm Confirm the selection of the Pre Wash,Extra Rinse,Speed Wash,Extra Rinse or Anti-crease function.
	Spin Press the button to change the speed. 1400: 0-600-800-1000-1200-1400 1500: 0-600-800-1000-1200-1500

	Child Lock To avoid mis operation by children.
 	Press [Function] and [Select] 3 sec. till buzzer beep.

⚠ Caution!

When child lock is activated and program starts, child lock indicator will switch on, and the CL and remaining time on the display are alternately displayed in 0.5s.

Press the other buttons will make child lock indicator flash for 3s. when program finish,CL and END alternate for 10s in 0.5s, then the child lock lights flash for 3s

- Only press and hold the two button can release child lock, even power off, switch off and program end
- The "Child Lock" will lock all buttons except Power button and Child Lock button
- Please release child lock before selecting program and staring washing

	Mute the buzzer
---	------------------------



Choose the Programme



Press the [Dry]and[Temp.] for 3sec.,
the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.

⚠ Caution!

- After Muting the buzzer function, the sounds will not be activated any more.

MAINTENANCE

■ Cleaning and Care

⚠ Warning!

- Always unplug the appliance and close the water tap before cleaning and maintenance.

Cleaning the Cabinet

Proper maintenance on the washing machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a cloth to wipe it off immediately. Never use sharp items to clean the appliance.



ⓘ Caution!

- Never use abrasive or caustic agents, formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

Cleaning the Drum

Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

📌 Note!


- Keep any laundry away from the machine while cleaning the drum.

Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.

Remove any coins, buttons and other objects from the seal after each wash.

Clean the Door Seal and Glass every month to ensure the normal operation of the appliance.

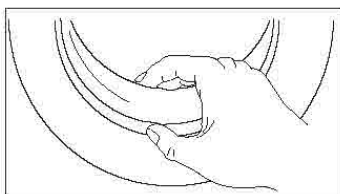





MAINTENANCE

Cleaning the Inlet Filter

Note!


- Diminishing water flow is a sign that the filter need to be cleaned.

1. Close the tap and remove the water supply hose from it.
2. Clean the filter with a brush.
3. Unscrew the water supply hose from the backside of the machine. Pull out the filter with long nose pliers.
4. Use a brush to clean the filter.
5. Reinstall the filter to the water inlet and reconnect the water supply hose.
6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.

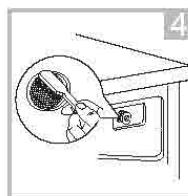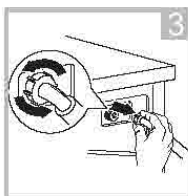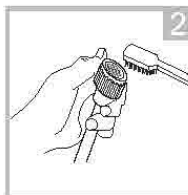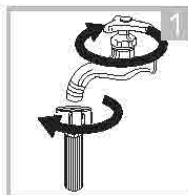


Clean The Detergent Dispenser


1. Press down the release [] on the softener cover and pull the dispenser drawer out of the recess. Clean the inside of the recess with a brush.
2. Lift the softener cover off the dispenser drawer and wash both items with water.
3. Restore the softener cover and push the drawer back into the recess.

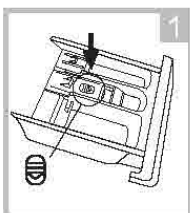


Press the release and remove the dispenser drawer

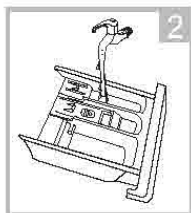

Clean the dispenser drawer and the softener cover under water

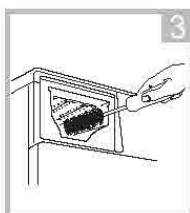

Clean the recess with a soft brush

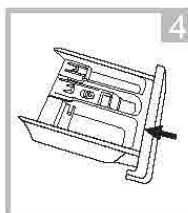

Insert the dispenser drawer

Note!


- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance

MAINTENANCE


Cleaning the Drain Pump Filter

Warning!

- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Allow the water to cool down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.

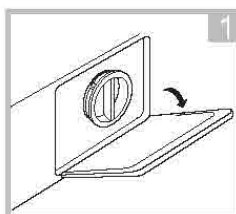


Open the lower cover cap

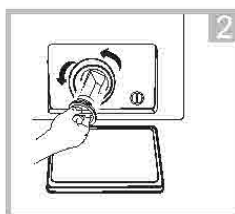

Open the filter by turning to the counter clockwise



Remove extraneous matter

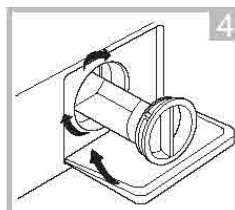

Close the lower cover cap

Caution!

- Make sure that valve cap and emergency drain hose are reinstalled properly, cap plates should be inserted aligning to hole plates otherwise water may leak.
- Some machines don't have emergency drain hose, so step 2 and step 3 can be skipped. Rotate lower cover cap directly to make water run into basin.
- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When replacing the cover, ensure it is securely re-tightened.

MAINTENANCE

■ Trouble Shooting

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact the customer service.

Description	Possible cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts still in place. Floor is not solid or level.	Check if the fixing bolts have been removed Make sure the appliance is installed on a solid and level floor.

Error Codes

Description	Possible cause	Solution
E30	Door is not closed properly	Close the door properly and restart.
E10	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
E21	Overtime water draining	Check the drain hose for blockage.
E12	Water overflow	Restart the appliance.
EXX	Others	Restart the appliance. If problem persists, please contact the customer service.

MAINTENANCE

■ Customer service

Spare part for your appliance are available for a minimum of 10 years.

In case of questions please contact our customer service at:

Warning!

Risk of electric shock

- Never try repair an appliance which is defective or presumed to be defective.
You may put your own and future users' lives in danger. Only authorised specialists are allowed to carry out this repair work.
- Improper repair will void the warranty and subsequent damages can't be recognized!

Transport

IMPORTANT STEPS WHEN MOVING THE APPLIANCE


- Unplug the appliance and close the water inlet tap.
- Check, if the door and the detergent dispenser are closed properly.
- Remove the water inlet pipe and the outlet hose from the house installations.
- Let the water drain completely from the appliance (see "Maintenance Cleaning the drain pump filter")
- Important: Re-install the 4 transport bolts in the back of the appliance.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door cannot be used as a handle.

■ Technical Specifications

Power Supply 220-240V~, 50Hz

MAX. Current 10A

Standard Water Pressure 0.05MPa~1MPa

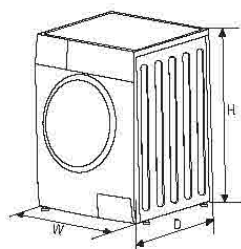

Model	Washing Capacity Drying Capacity	Dimension (W*D*Hmm)	Net Weight	Rated Power
Serie 7-8614 LS	8.0/6.0kg	595*475*850	64kg	1900W
Serie 7-10715 LS	10.0/7.0kg	595*565*850	72kg	1950W

MAINTENANCE

■ Product Fiches

Product Information Sheet acc. regulation (EU) 2019/2023

Supplier's name or trade mark:

Supplier's address (*): Serie 7-8614 LS

Model identifier:

General product parameters:

Parameter	Value		Parameter	Value	
Rated capacity (kg)	Rated capacity (*)	6.0	Dimensions in cm	Height	85
	Rated washing capacity (*)	8.0		Width	60
				Depth	47
Energy Efficiency Index	EEI _w (*)	60.0	Energy efficiency class	EEI _w (*)	B
	EEI _{wd} (*)	82.0		EEI _{wd} (*)	E
Washing efficiency index	I _w (*)	1.04	Rinsing effectiveness (g/kg dry textile)	I _R (*)	5
	I _w (*)	1.04		I _R (*)	5
Energy consumption in kWh per kg per cycle, for the washing cycle of the household washer-dryer, using the eco 40-60 programme at a combination of full and partial loads. Actual energy consumption will depend on how the appliance is used	0.544		Energy consumption in kWh per kg per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual energy consumption will depend on how the appliance is used	3.768	
Water consumption in litre per cycle, for the eco 40-60 programme at a combination of full and partial loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	48		Water consumption in litre per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	90	
Maximum temperature inside the treated textile (°C) (*)	Rated washing capacity	38	Remaining moisture content (*) (%)	Rated capacity	53
	Half	38		Half	53
	Quarter	21		Quarter	53
Spin speed (rpm) (*)	Rated washing capacity	1400	Spin-drying efficiency class (*)	B	
	Half	1400			
	Quarter	1400			
Eco 40-60 programme duration (h:min)	Rated washing capacity	3:38	wash and dry cycle duration (h:min)	Rated capacity	9:30
	Half	2:48		Half	6:40
	Quarter	2:48			

MAINTENANCE

Airborne acoustical noise emissions during the spinning phase for the eco 40-60 washing cycle at rated washing capacity	76	Airborne acoustical noise emission class for the spinning phase for the eco 40-60 programme at rated washing	B
Type	[built-in/free-standing]	free-standing	
Off-mode (W)	0.50	Standby mode (W)	N/A
Delay start (W) (if applicable)	4.00	Networked standby (W) (if applicable)	N/A

Minimum duration of the guarantee offered by the supplier (*):

This product has been designed to release silver ions during the washing cycle	NO
--	----

Additional Information:

Weblink to the supplier's website, where the information in point 9 of Annex II to Regulation (EU) 2019/2023 is found

(b):

(*) for the eco 40-60 programme.

(*) for the wash and dry cycle Dry level: 星, Extra Dry

(*) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.

(*) If the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

MAINTENANCE

Product Information Sheet acc. regulation (EU) 2019/2023

Supplier's name or trade mark:

Supplier's address (✉): Serie 7-10715 LS

Model Identifier:

General product parameters:

Parameter	Value		Parameter	Value	
Rated capacity (kg)	Rated capacity (°)	7.0	Dimensions in cm	Height	85
	Rated washing capacity (°)	10.0		Width	60
				Depth	57
Energy Efficiency Index	EEI _w (°)	60.0	Energy efficiency class	EEI _w (°)	B
	EEI _{wd} (°)	67.0		EEI _{wd} (°)	D
Washing efficiency index	I _w (°)	1.04	Rinsing effectiveness (g/kg dry textile)	I _R (°)	5
	J _w (°)	1.04		I _R (°)	5
Energy consumption in kWh per kg per cycle, for the washing cycle of the household washer-dryer, using the eco 40-60 programme at a combination of full and partial loads. Actual energy consumption will depend on how the appliance is used	0.593		Energy consumption in kWh per kg per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual energy consumption will depend on how the appliance is used	3.430	
Water consumption in litre per cycle, for the eco 40-60 programme at a combination of full and partial loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	52		Water consumption in litre per cycle, for the wash and dry cycle of the household washer-dryer at a combination of full and half loads. Actual water consumption will depend on how the appliance is used and on the hardness of the water	100	
Maximum temperature inside the treated textile (°C) (°)	Rated washing capacity	38	Remaining moisture content (°) (%)	Rated capacity	53
	Half	36		Half	53
	Quarter	23		Quarter	53
Spin speed (rpm) (°)	Rated washing capacity	1500	Spin-drying efficiency class (°)	B	
	Half	1500			
	Quarter	1500			
Eco 40-60 programme duration (h:min)	Rated washing capacity	3:59	wash and dry cycle duration (h:min)	Rated capacity	9:40
	Half	3:00		Half	7:00
	Quarter	3:00			

MAINTENANCE

Airborne acoustical noise emissions during the spinning phase for the eco 40-60 washing cycle at rated washing capacity	80	Airborne acoustical noise emission class for the spinning phase for the eco 40-60 programme at rated washing	C
Type	[built-in/free-standing]	free-standing	
Off-mode (W)	0.50	Standby mode (W)	NA
Delay start (W) (if applicable)	4.00	Networked standby (W) (if applicable)	NA
Minimum duration of the guarantee offered by the supplier (*):			
This product has been designed to release silver ions during the washing cycle	NO		

Additional Information:

Weblink to the supplier's website, where the information in point 9 of Annex II to Regulation (EU) 2019/2023 is found

(b):

(*) for the eco 40-60 programme.

(*) for the wash and dry cycle Dry level: 星, Extra Dry

(*) changes to these items shall not be considered relevant for the purposes of paragraph 4 of Article 4 of Regulation (EU) 2017/1369.

(*) if the product database automatically generates the definitive content of this cell the supplier shall not enter these data.

MAINTENANCE

- 1) The actual energy consumption will depend on how the appliance is used.
- 2) The actual water consumption will depend on how the appliance is used and on the hardness of the water.
- 3) Delivery of the spare parts within 15 working days after having received the order.

Product Data Sheet concerning (EU) 2019/2014

The product data sheet for your appliance can be found online.

Go to <https://eprel.ec.europa.eu> and enter the model identifier for your appliance to download the data sheet.

The model identifier for your appliance can be found in the technical specifications section.

Remarks:

- 1 The energy efficiency class is from A(highest efficiency) to D (lowest efficiency)
- 2 Energy consumption per year, based on 220 standard washing cycles for standard programme at 60°C and 40°C at full and partial load, and the consumption of the low-power modes. Actual energy consumption will depend on how the appliance is used.
- 3 Water consumption per year based on 220 standard washing cycles for standard programme at 60°C and 40°C at full and partial load. Actual water consumption will depend on how the appliance is used.
- 4 Spin-drying efficiency class from G (least efficient) to A (most efficient).
- 5 The standard 60°C programme and the standard 40°C programme are the standard washing programmes. These programmes are suitable to clean normally soiled cotton laundry and they are the most efficient programmes in terms of combined energy and water consumptions for washing that type of cotton laundry. The actual water temperature may differ from the declared cycle temperature.
Please choose the suitable type of detergent for the various washing temperatures to get the best washing performance with less water and energy consumption.