


# Assembly Instruction


Ref. 65002

Model : Zapatero  
Kubox 2/P

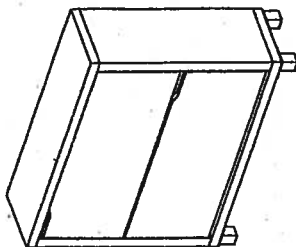


## Part List


| Hardware List |                      |        |
|---------------|----------------------|--------|
| No.           | DESCRIPTION          | QTY    |
| 1             | 8x25mm Wood Dowel    | 12Pcs  |
| 2             | 16MM Nylon Nuts      | 10Sets |
| 3             | M2x12mm Screw        | 12Pcs  |
| 4             | M2x16mm Screw        | 24Pcs  |
| 5             | M2.5x20mm Screw      | 4Pcs   |
| 6             | 6x20mm Plastic Dowel | 4Pcs   |
| 7             | 2 Tray Shoe Rack     | 2Sets  |
| 8             | Soft Leg PVC H80     | 4Pcs   |




## Step 1

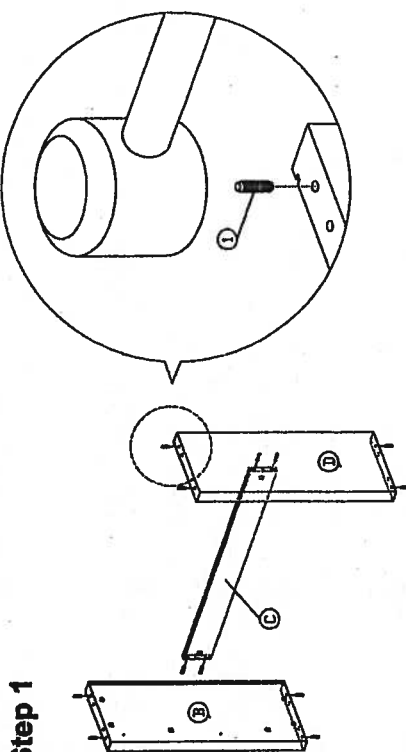


## Step 3

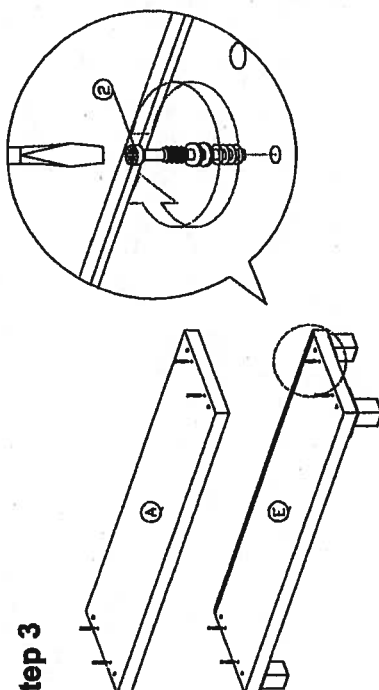


## Step 4

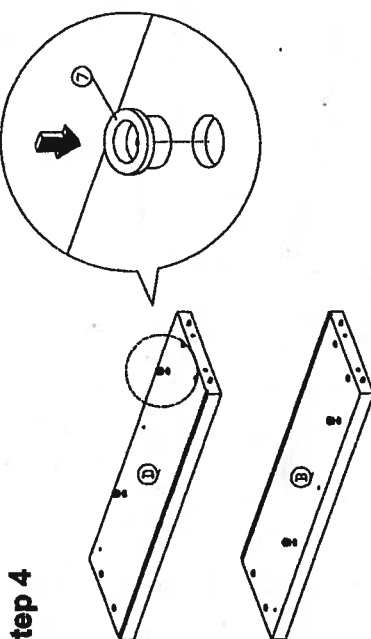


## Step 2 \*Bottom View

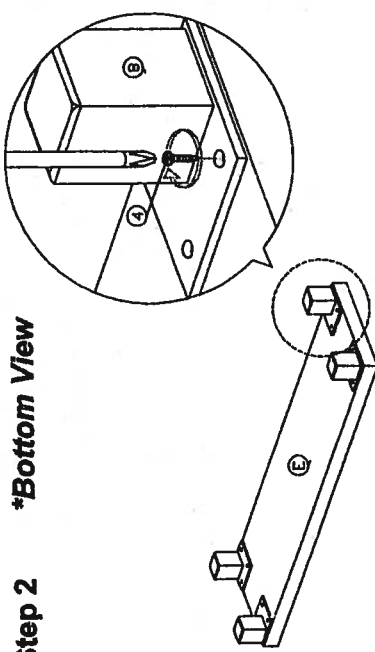

## Step 6

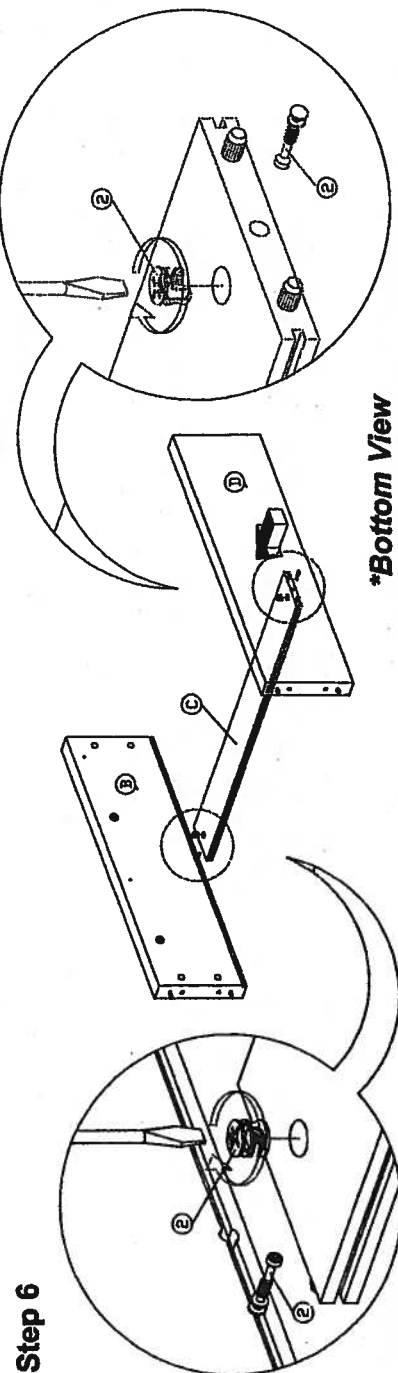


## Step 5

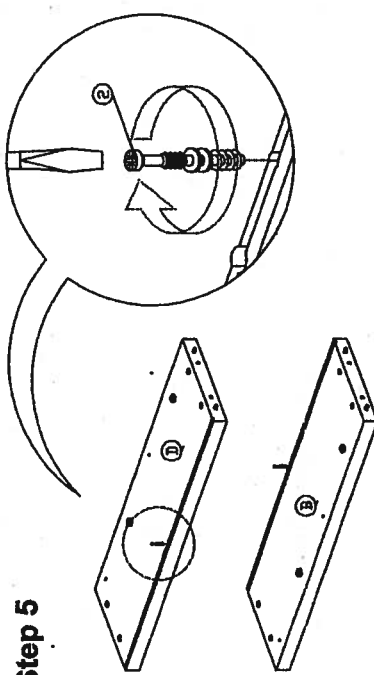



\*Bottom View

# Assembly Instruction


Step 7

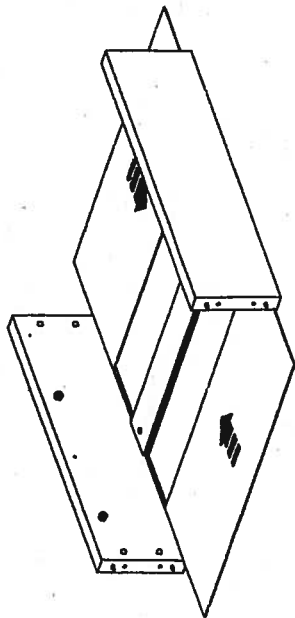


Step 8

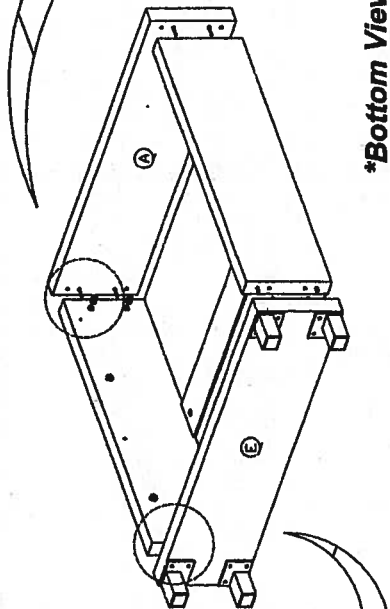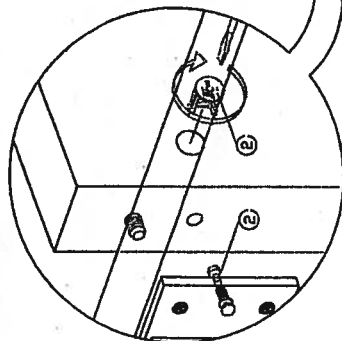


\*Bottom View

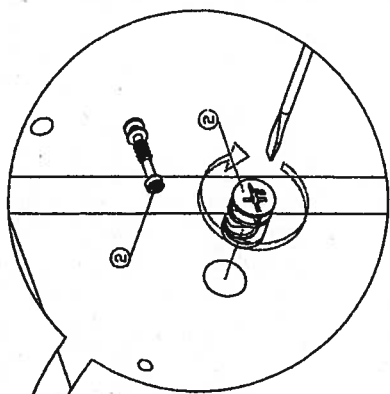


Step 9

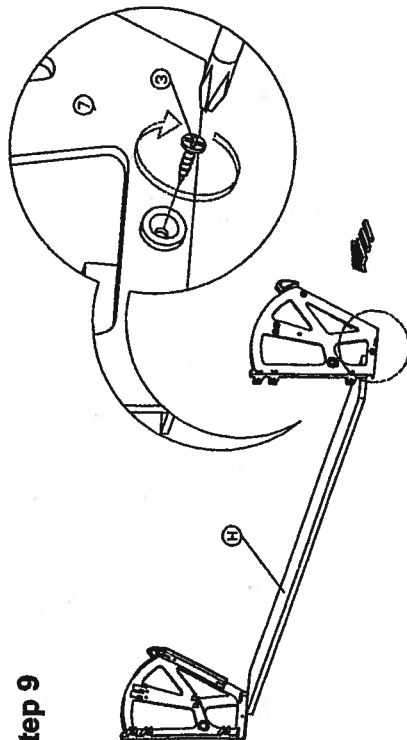


Step 10

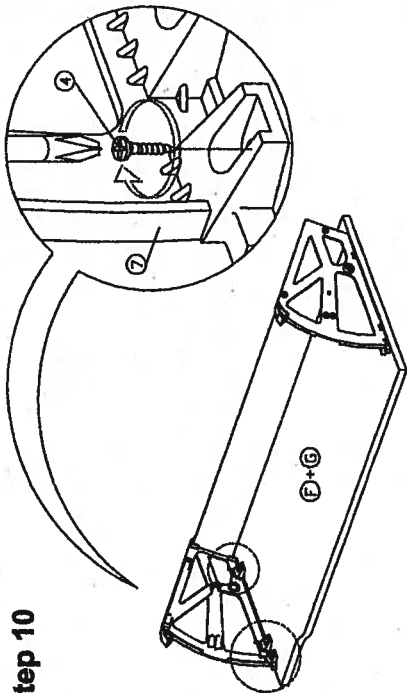



Step 11

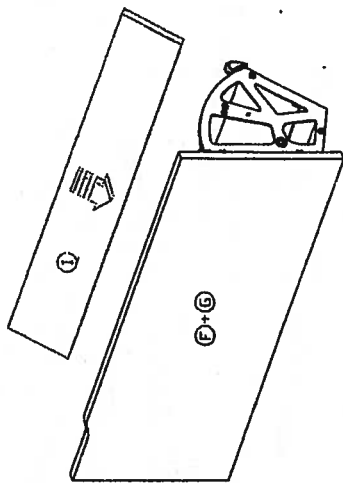

Step 12

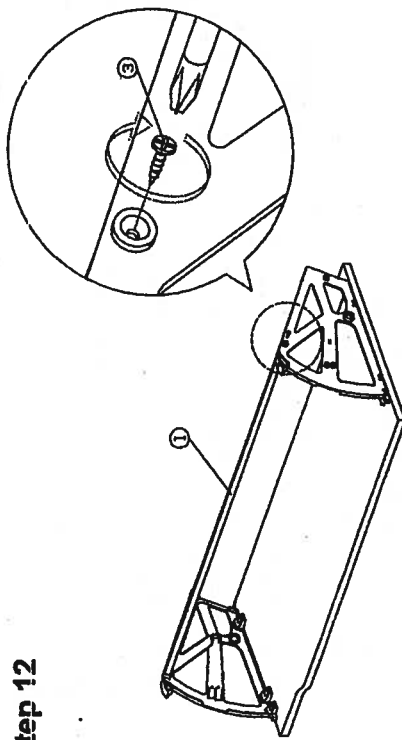

Step 13

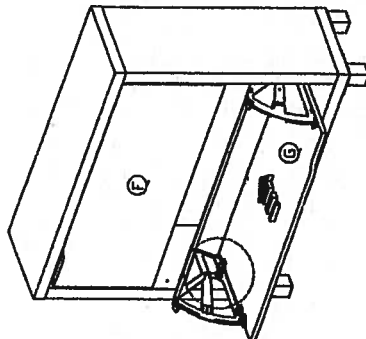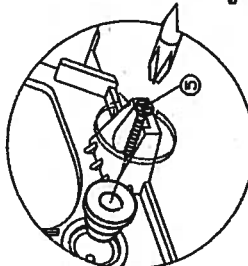

Step 14

