



Assembly Instruction

Ref 65003



Model : Zapatero
Kubox 3/P

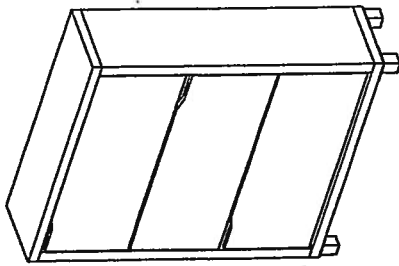



No	STAPE	Hardware List	QTY
1		DESCRIPTION 8x25mm Wood Dowel	16Pcs
2		15MM Thus Minifix	12564s
3		M3x12mm Screw	18Pcs
4		M3.5x16mm Screw	30Pcs
5		M3.5x20mm Screw	6Pcs
6		6x30mm Plastic Dowel	6Pcs
7		2 Tray Shoe Rack	35Sets
8		Sole Leg PVC H69	4Pcs

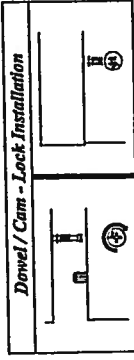


Part List

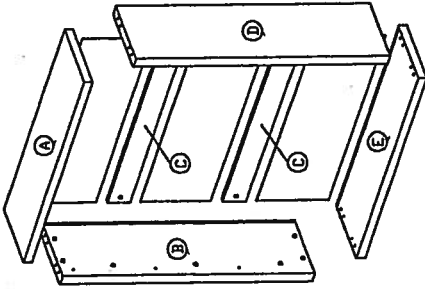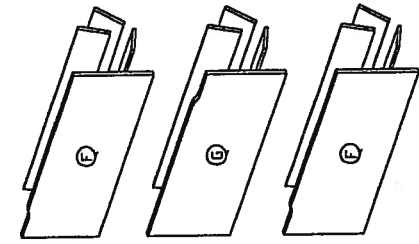



Step 1

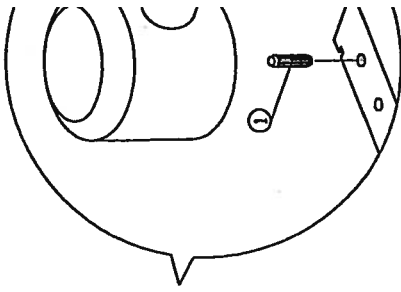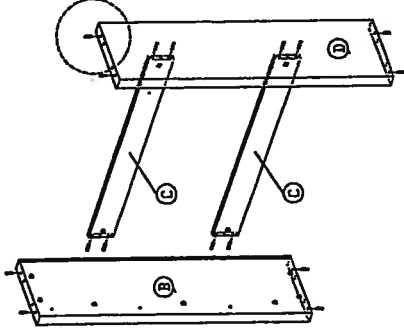


Step 2 *Bottom View

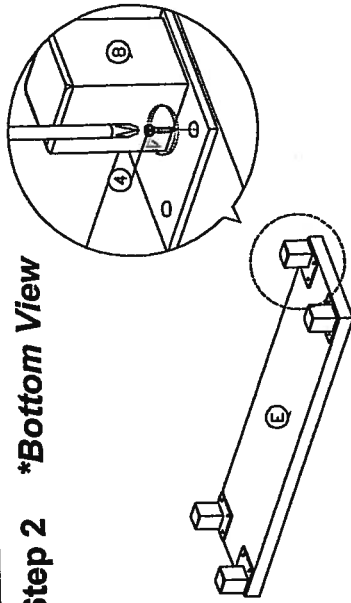



Step 3

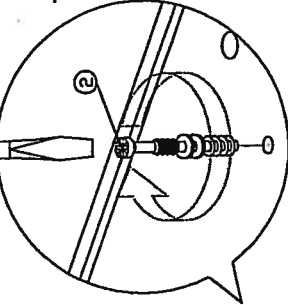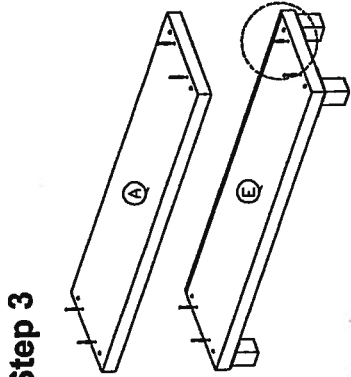



Step 4

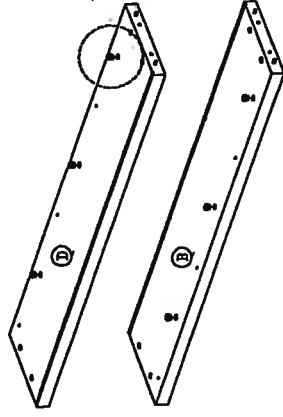


Step 5

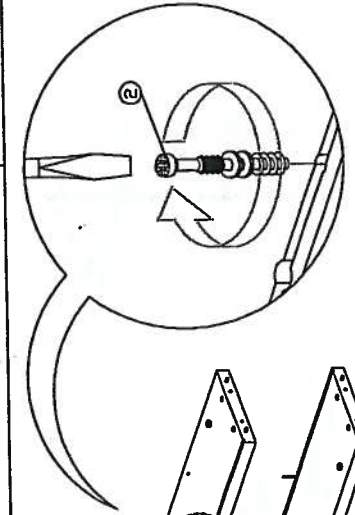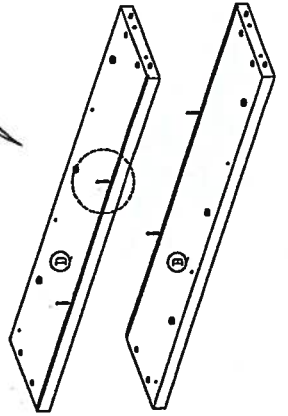

Step 6

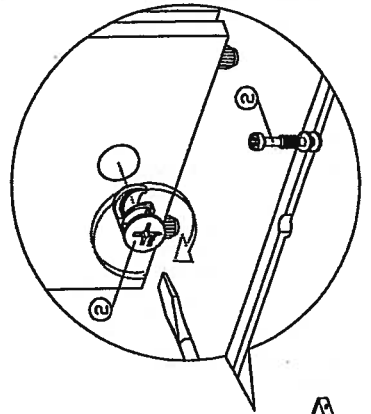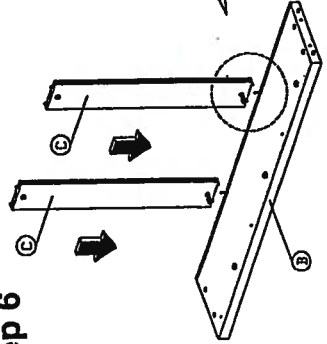


Step 7


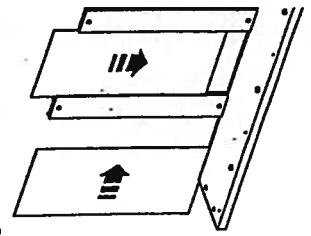


Assembly Instruction


Step 8

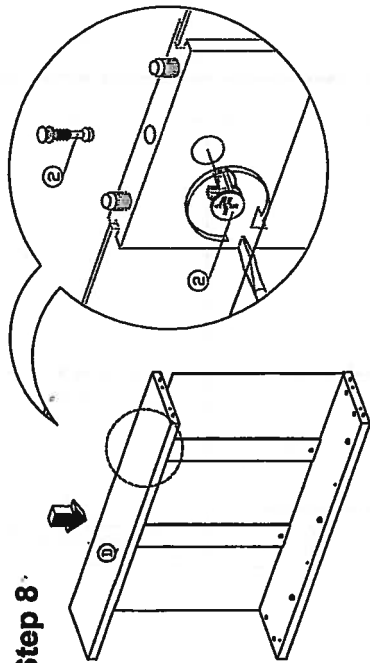


Step 9

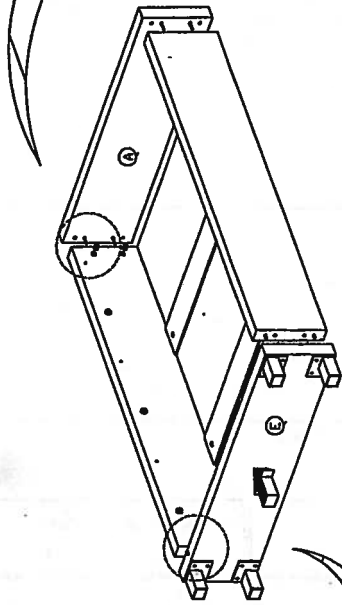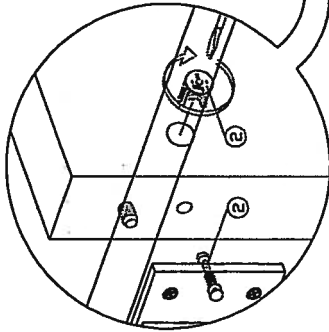


*Bottom View

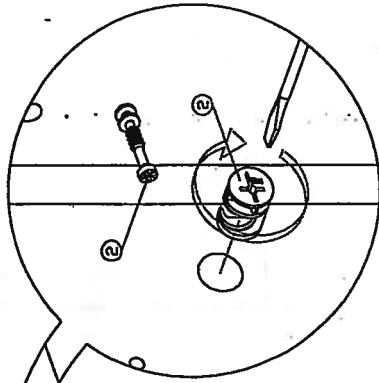


Step 10

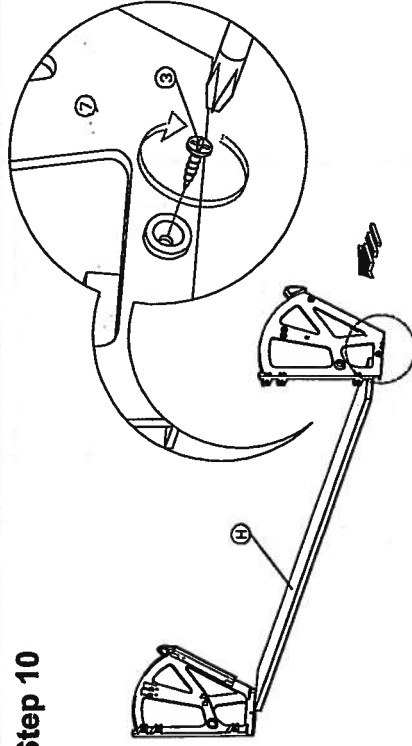


Step 11

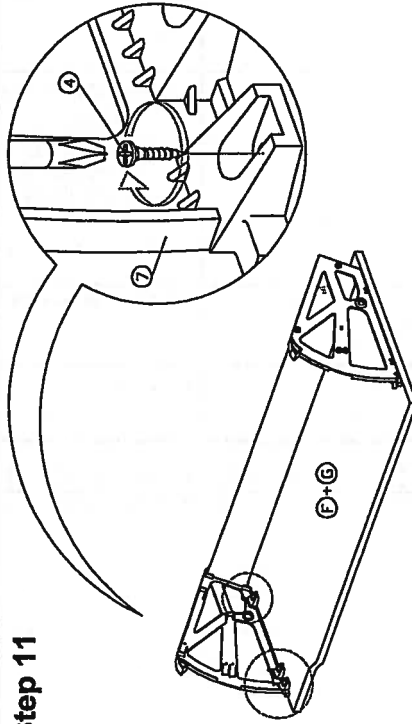


Step 12

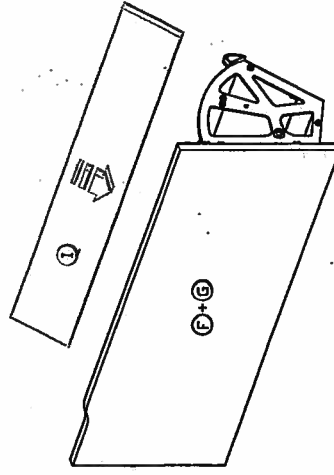

Step 13

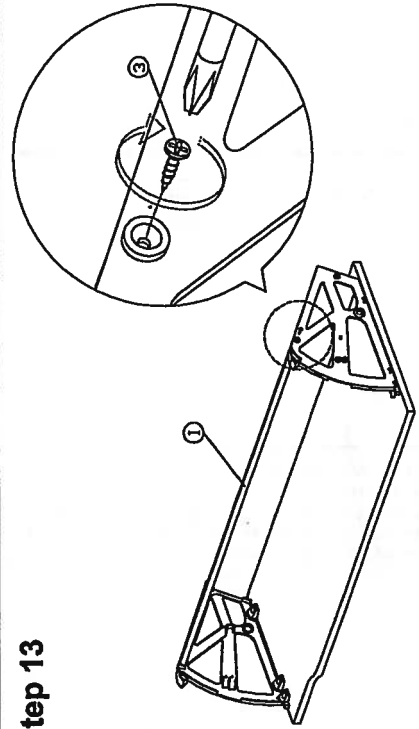

Step 14

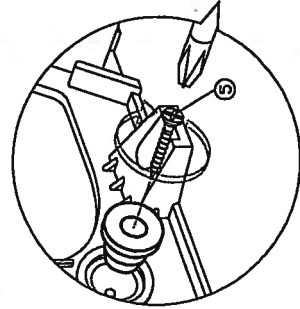

Step 15

